



1st, you need to make some settings in the monitor

(ES0502):


Restart the monitor ES0502, when it shows WELCOME on the screen, long press UNLOCK button to enter ADVANCED SETTINGS as below picture:

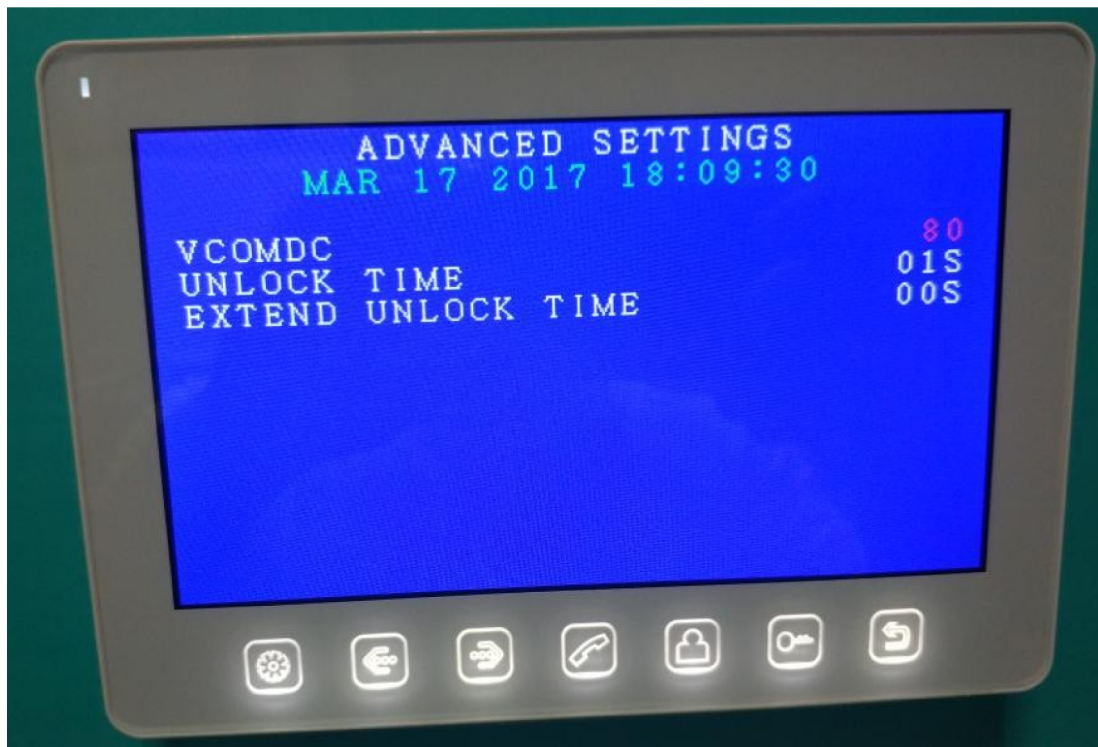

The 3rd item is for setting the unlock time for a second lock for gate. The default setting is 00S, means this functions is disabled. If want to connect a second lock for opening gate, pls set it to be 0.1S or other time according to your real need.

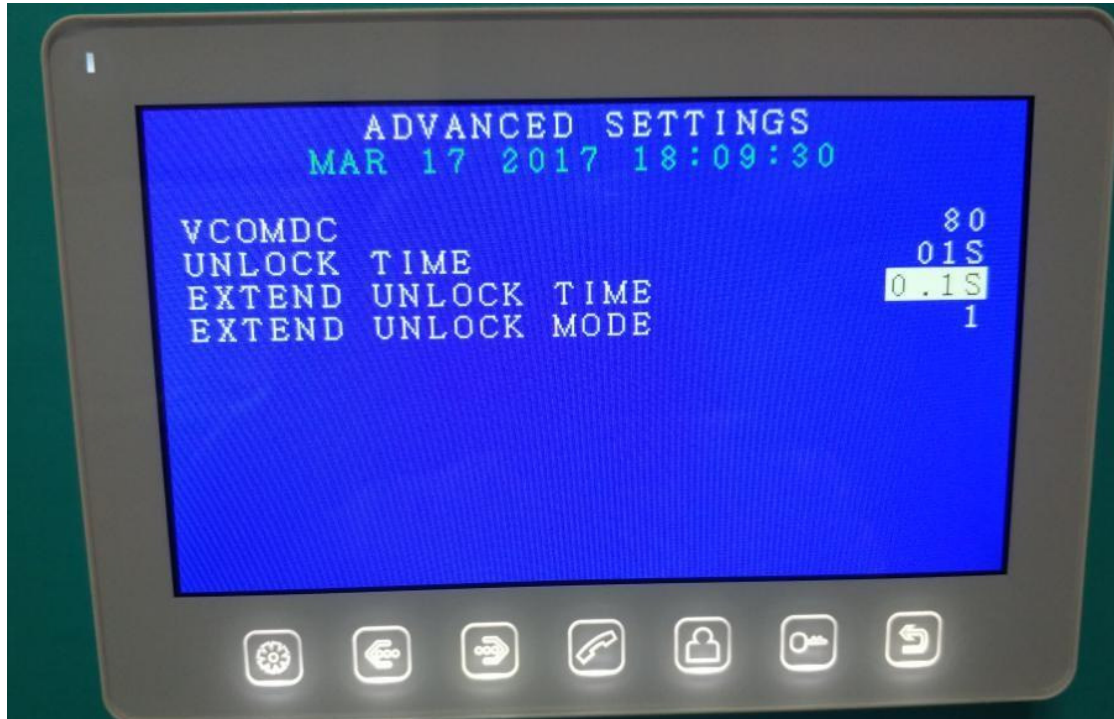

2. Connect a unlock assistor ES0507 to the gate as below diagram:

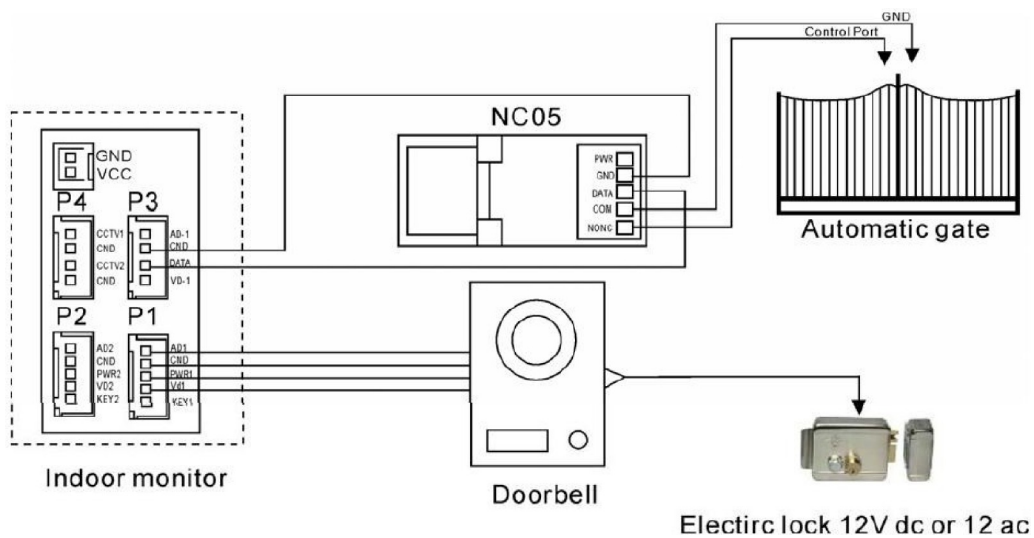

And for the detail information of ES0507, pls kindly find it from the attached ES0507 user manual.

3. When a visitor press the call button on the door panel to make a

call, user can press UNLOCK button on the monitor, then there will be 2 unlock mark on the screen, the user can press arrow to choose which lock as below picture:

