


AUDIO DOOR PHONE


INDOOR HANDSET

1. The function and name of each part

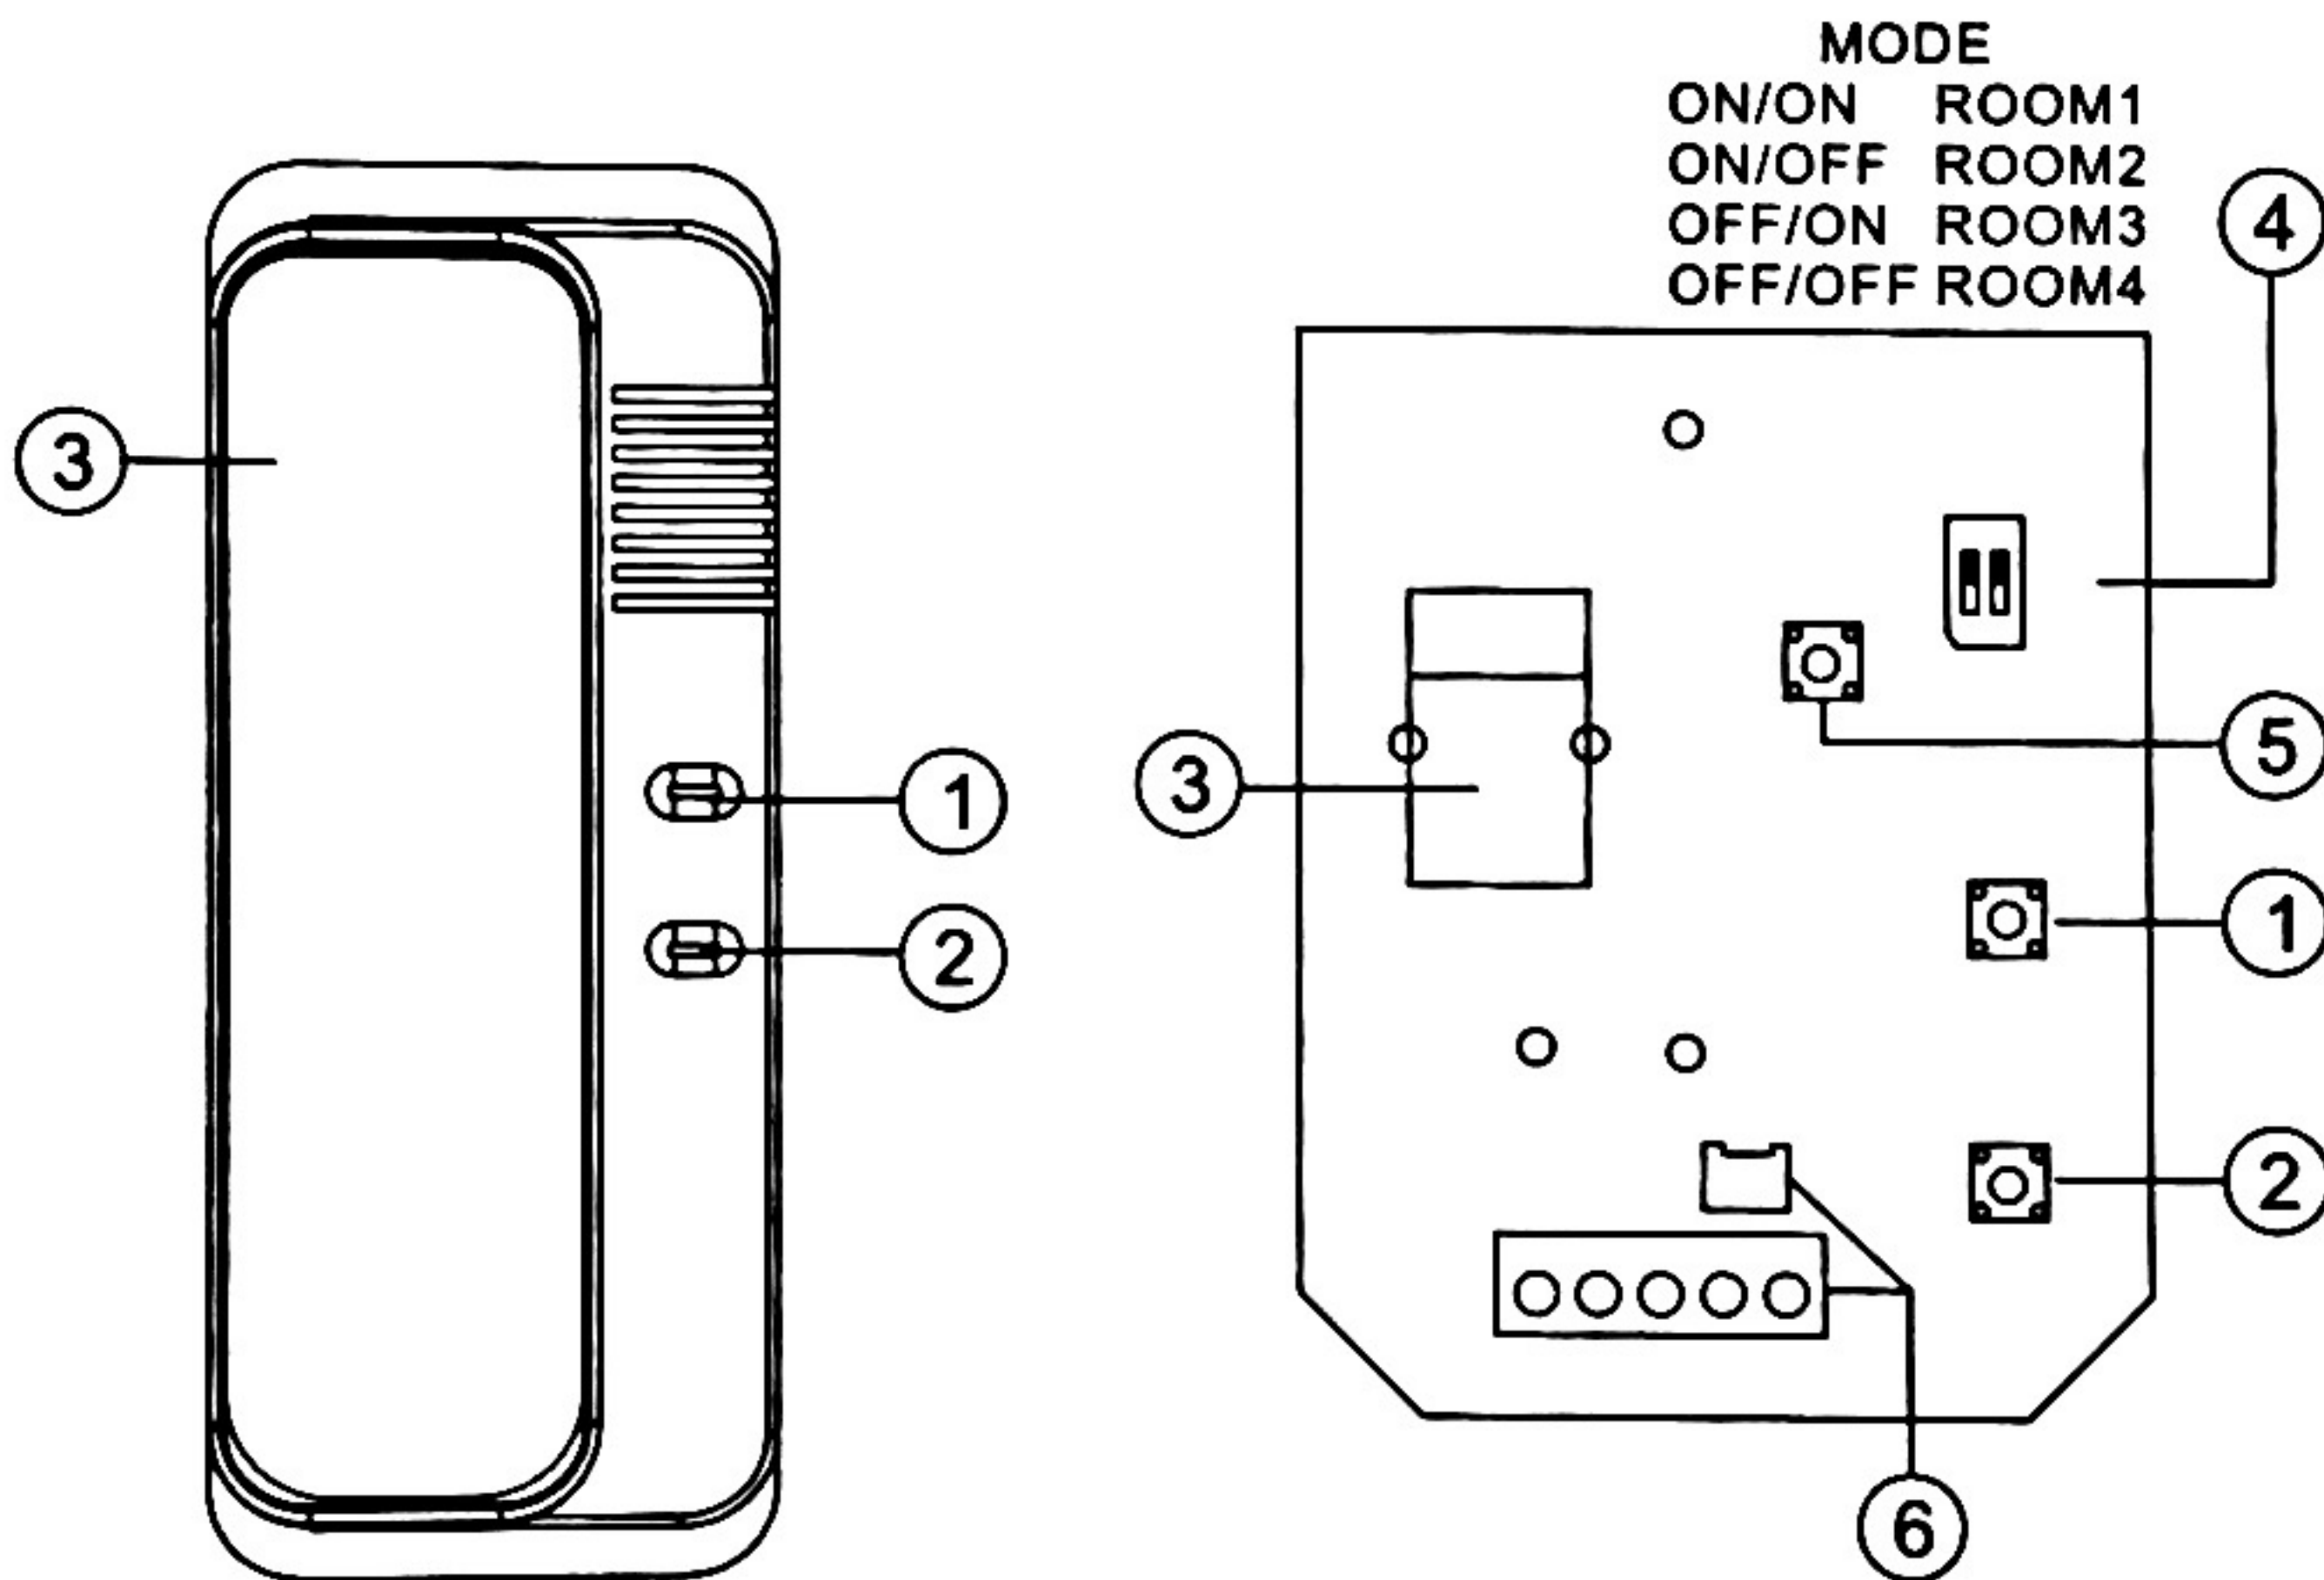

- 1). Unlock Button: unlock
- 2). Call button: intercom call/volume
- 3). Handset: answer/hang off
- 4). Coding switch: Mode setting
(setting master/slave door phone address, the setting will only be effected after restart power supply)
- 5). Setting button: Record the Room Number of audio door phone
- 6). IO port: power supply and cable connection

2. Ports in the rear panel

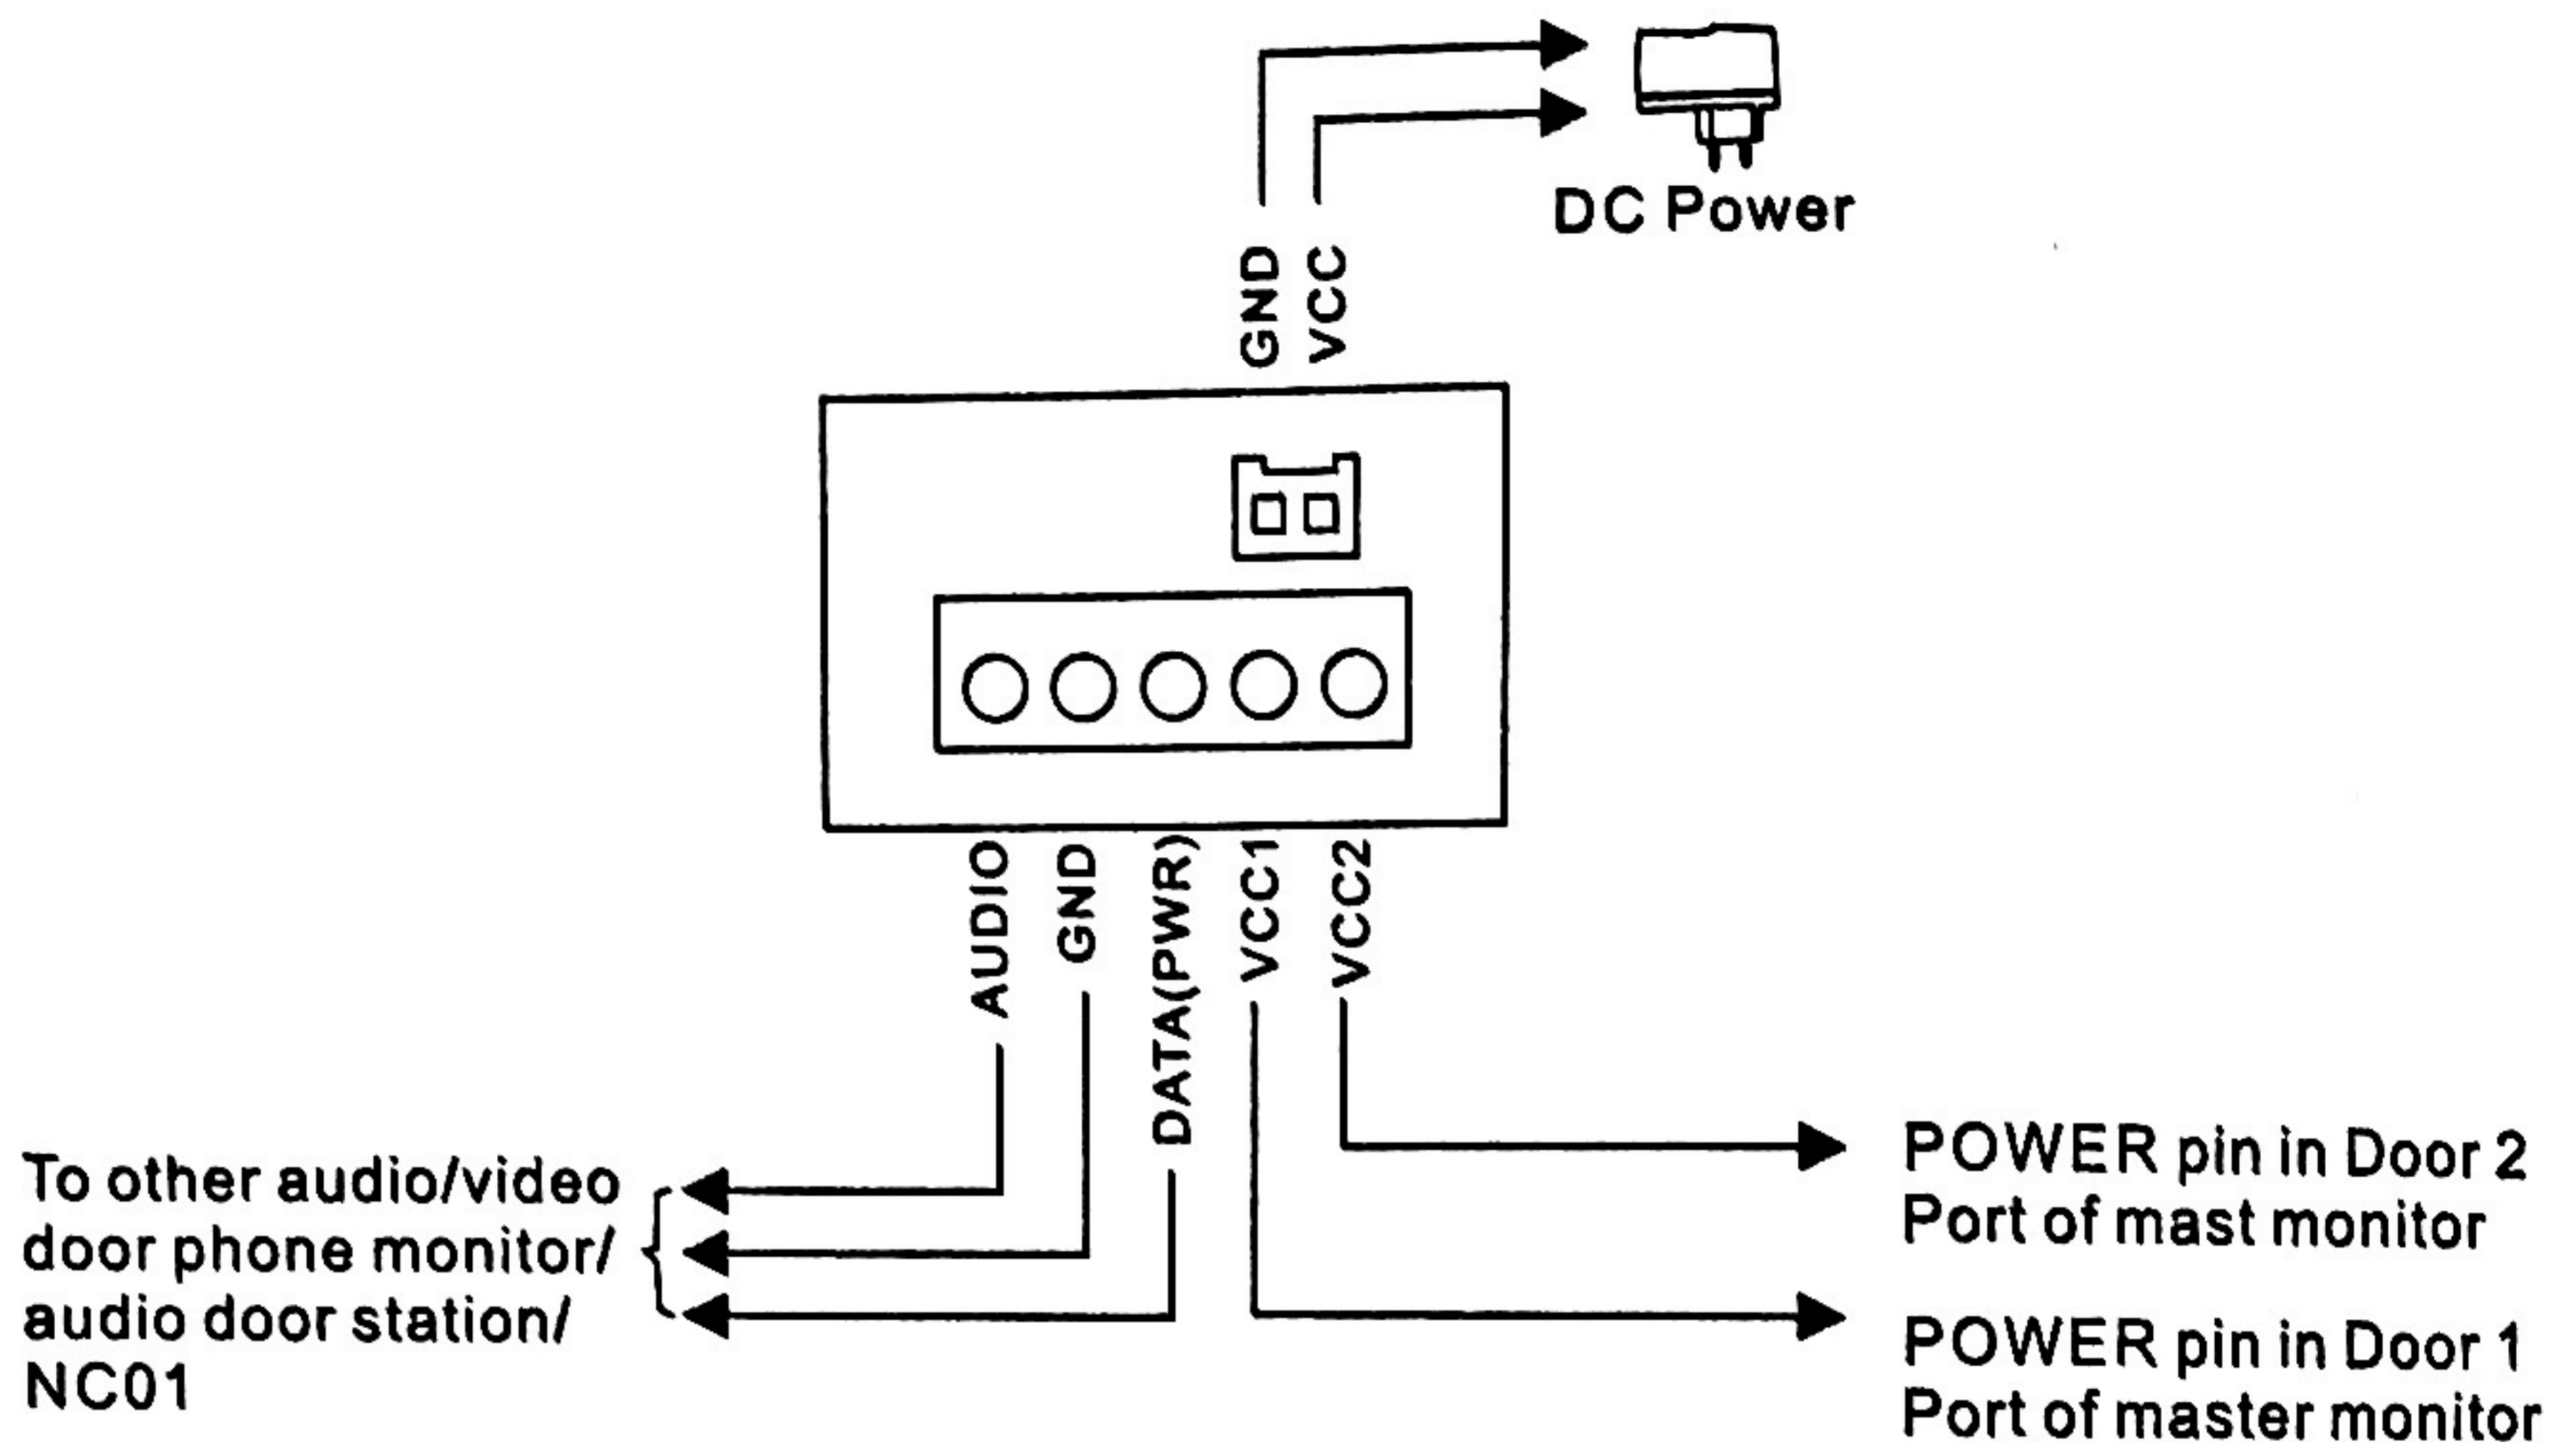


3. Main function/features

- ◆ Support to be used as extension audio phone handset for villas video door phone system or apartment video/audio door phone system.
- ◆ Answer the call.
- ◆ Make intercom to other video/audio door phones in the system(power must be supplied by adapter).
- ◆ Unlock the door
- ◆ At standby state, press Call button can set chime volume (high/middle/Low)

4. Wiring diagram


(1) Villa audio door phone system

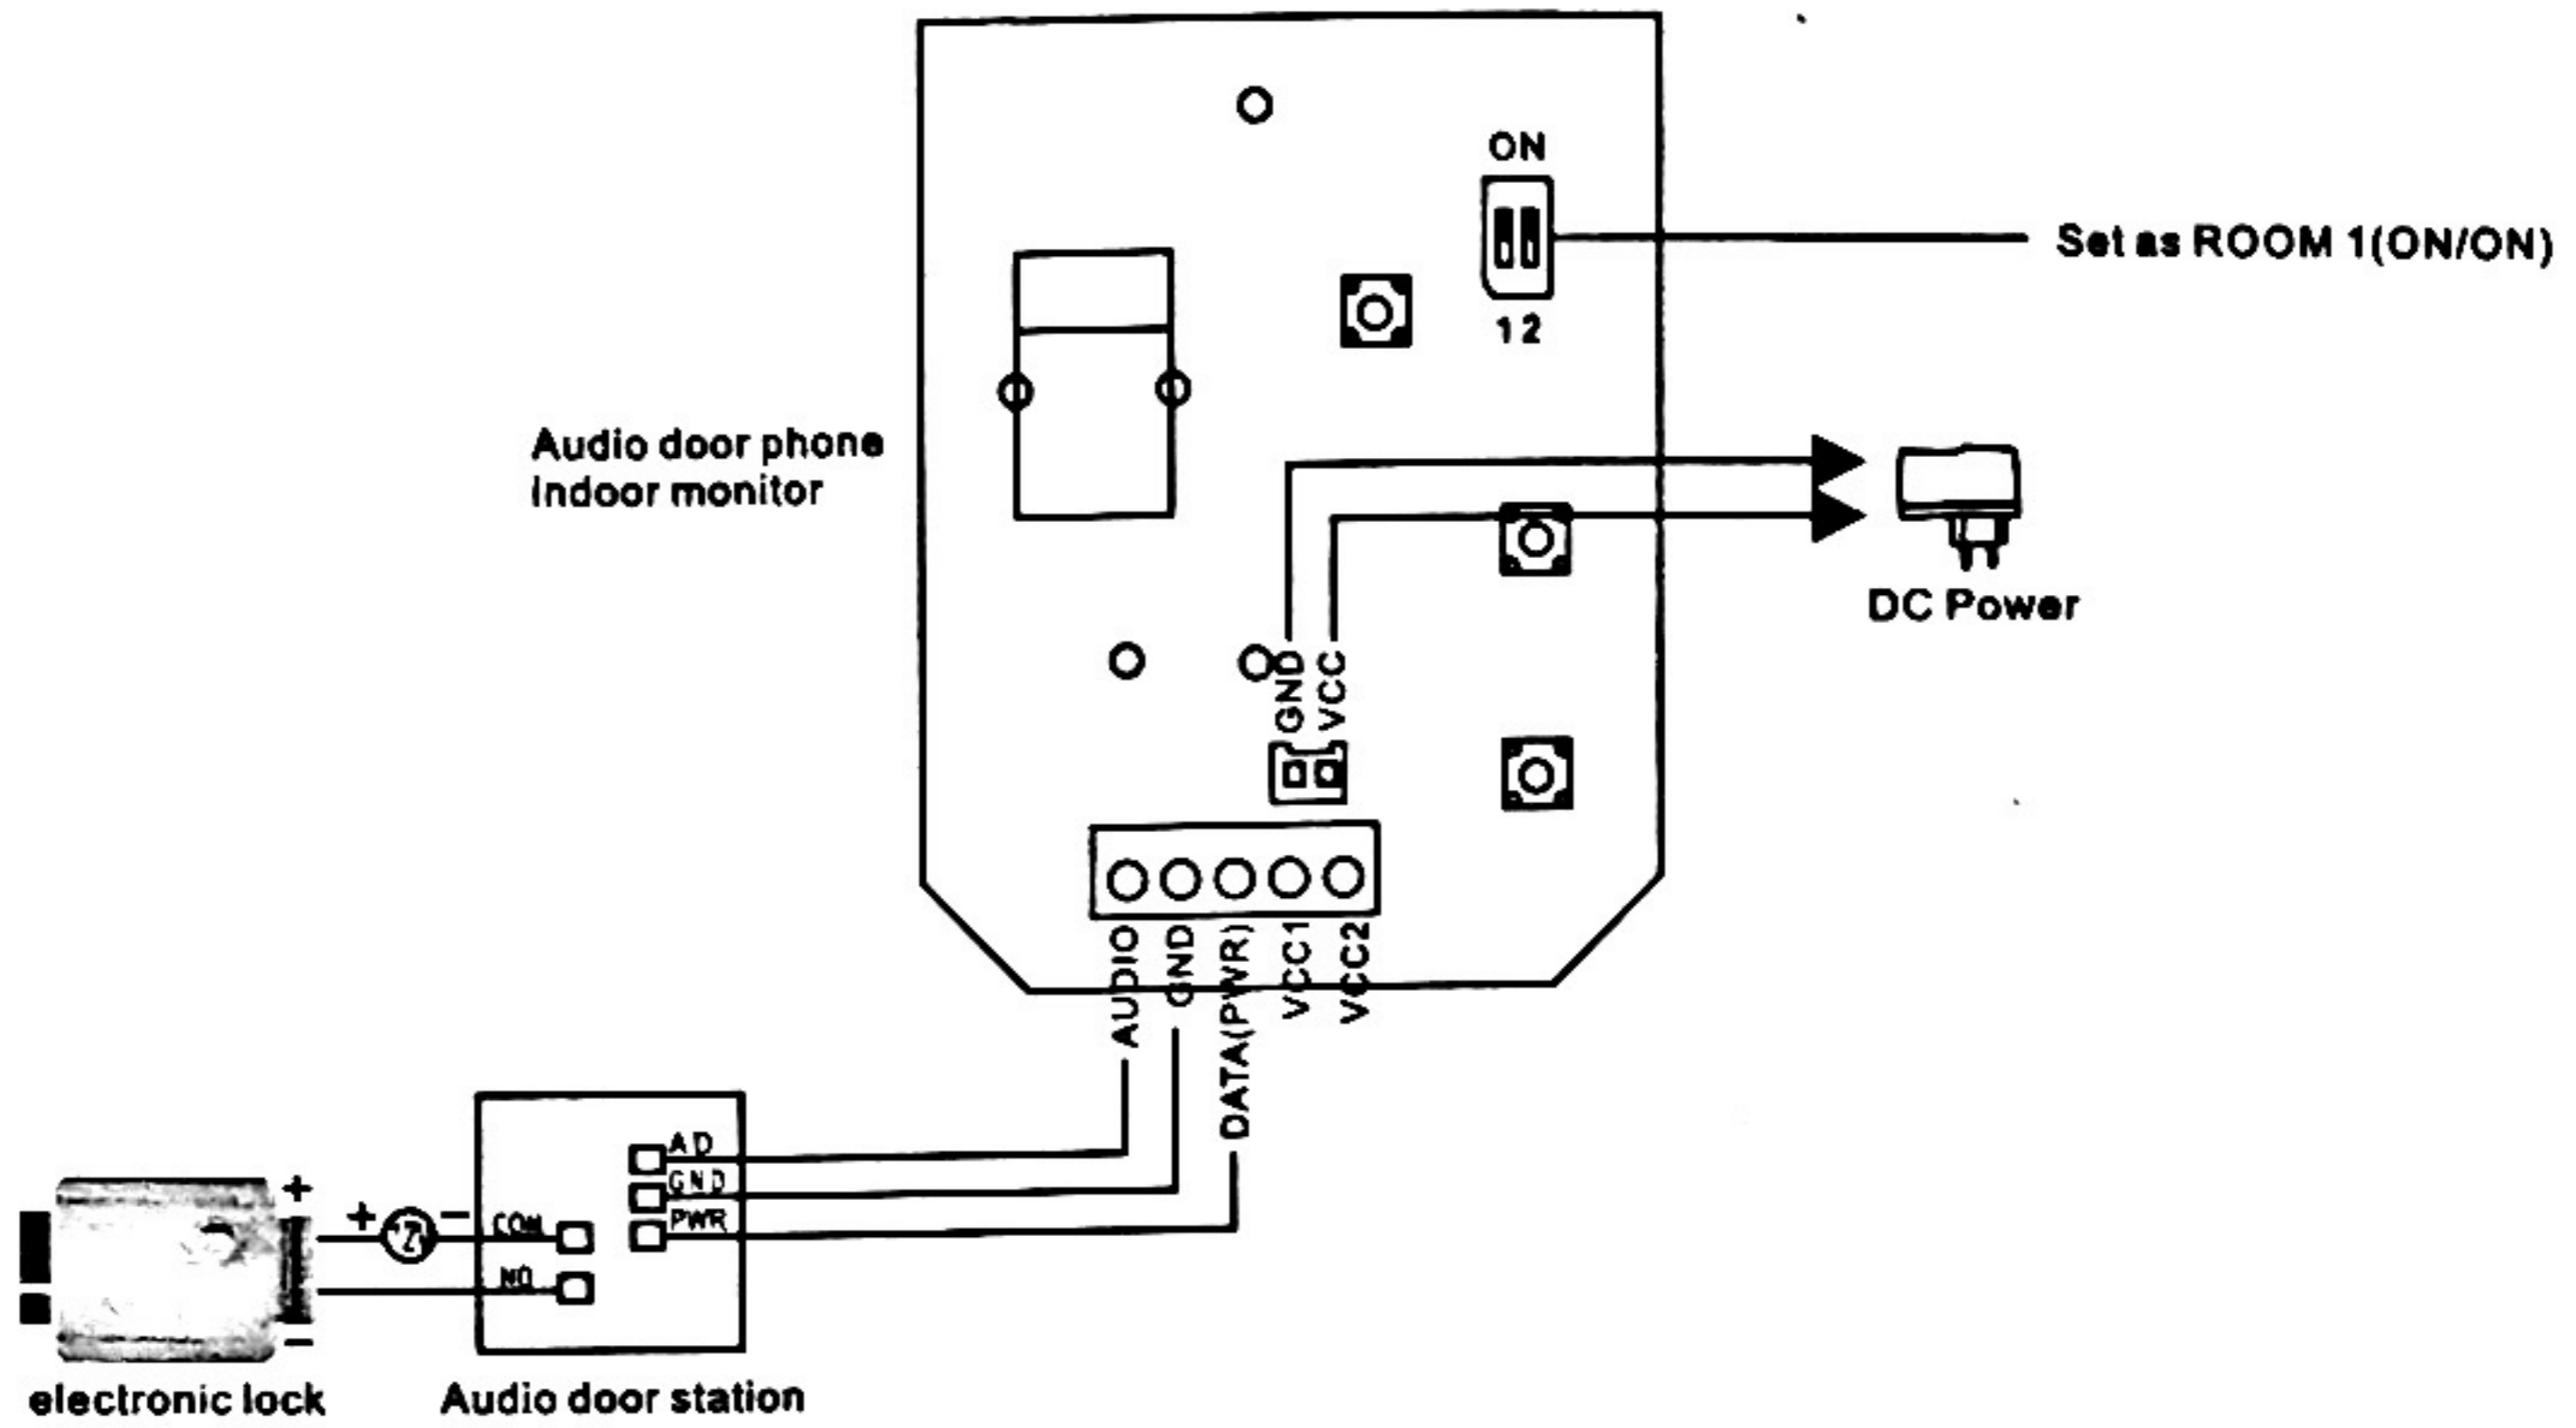


REMARK: The above maximum supports 1 indoor handset + 1 audio door station.

(2) Work as extension handset for villa video door phone system

(A) Extension handsets connect to adapter

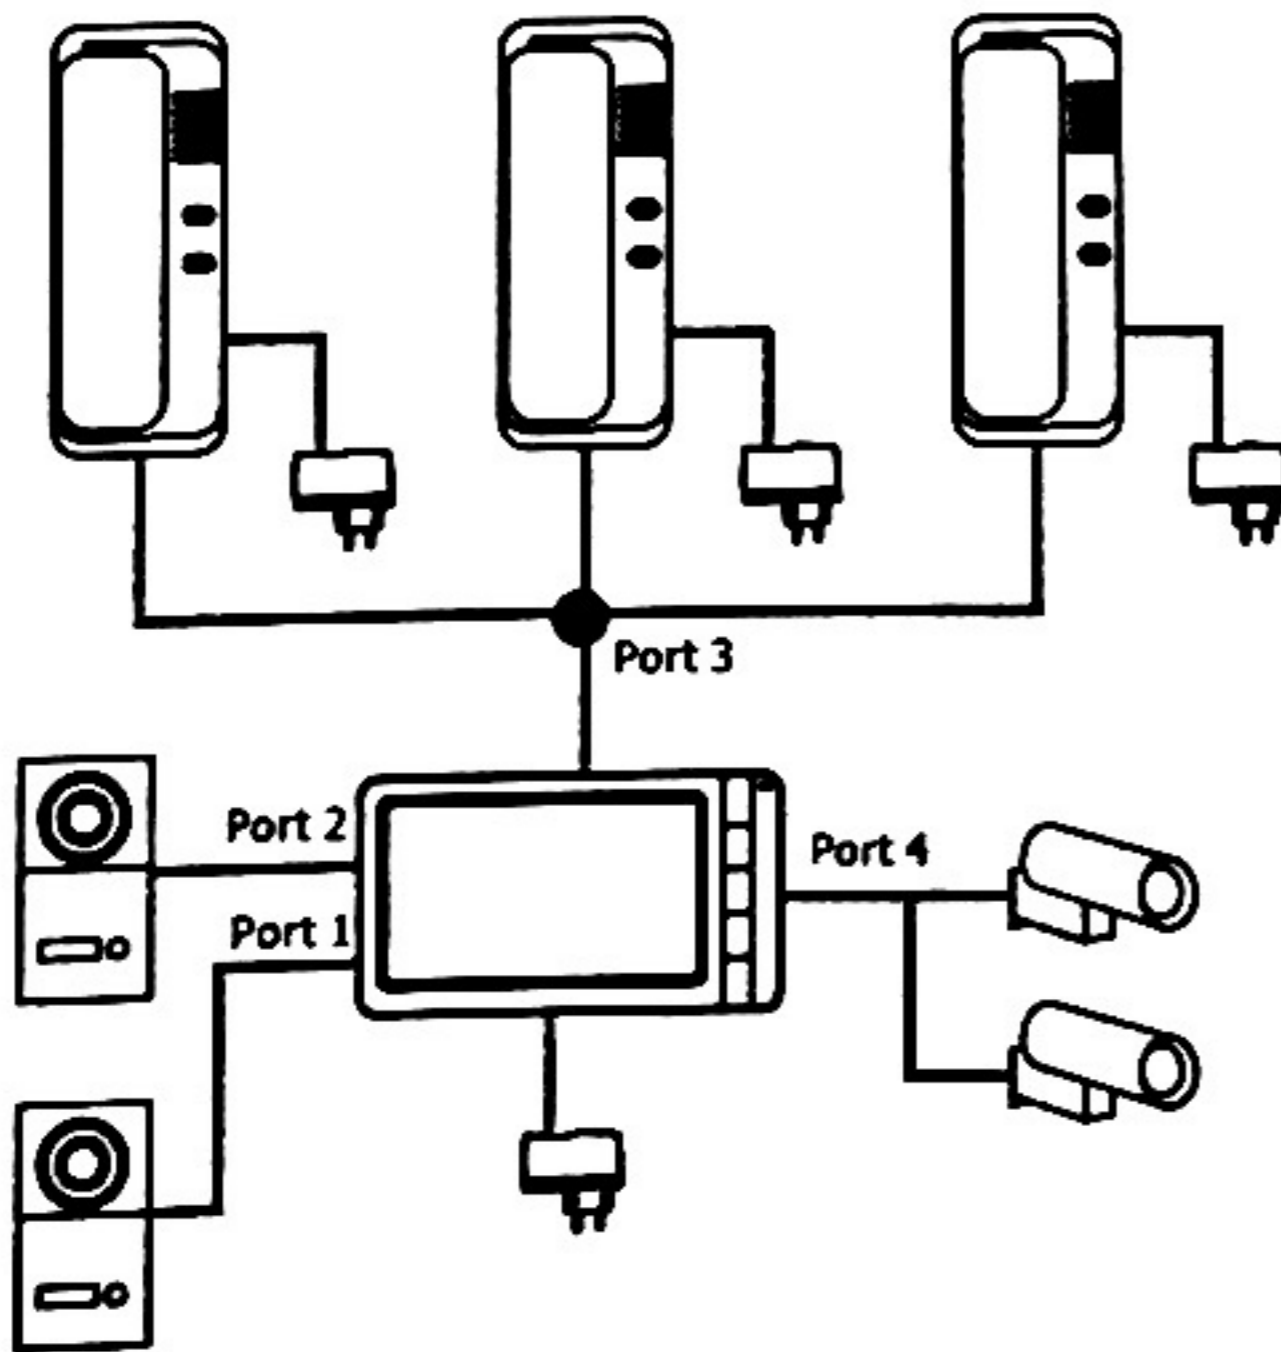


(B) Extension handsets do not connect to adapter

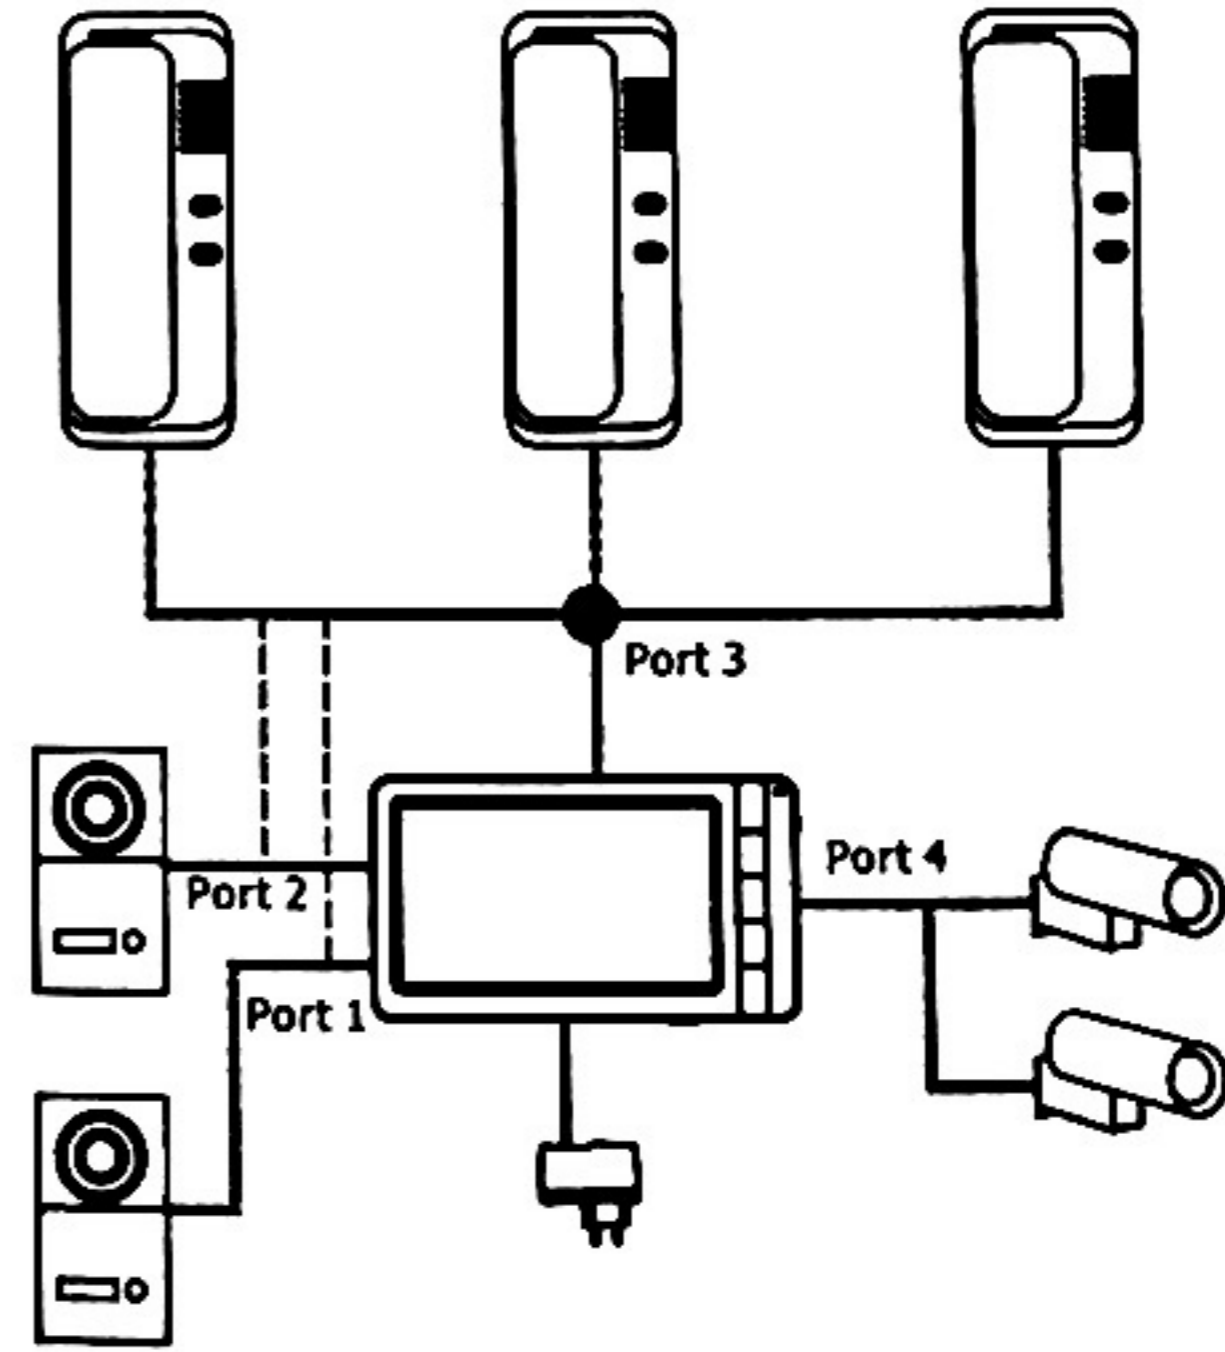


REMARK:
For wiring (A), the audio handset could make intercom to each other.

For wiring (B), the power is from Door 1/Door 2 Port, it can not make intercom between monitors/handsets.

Detail wiring (A)

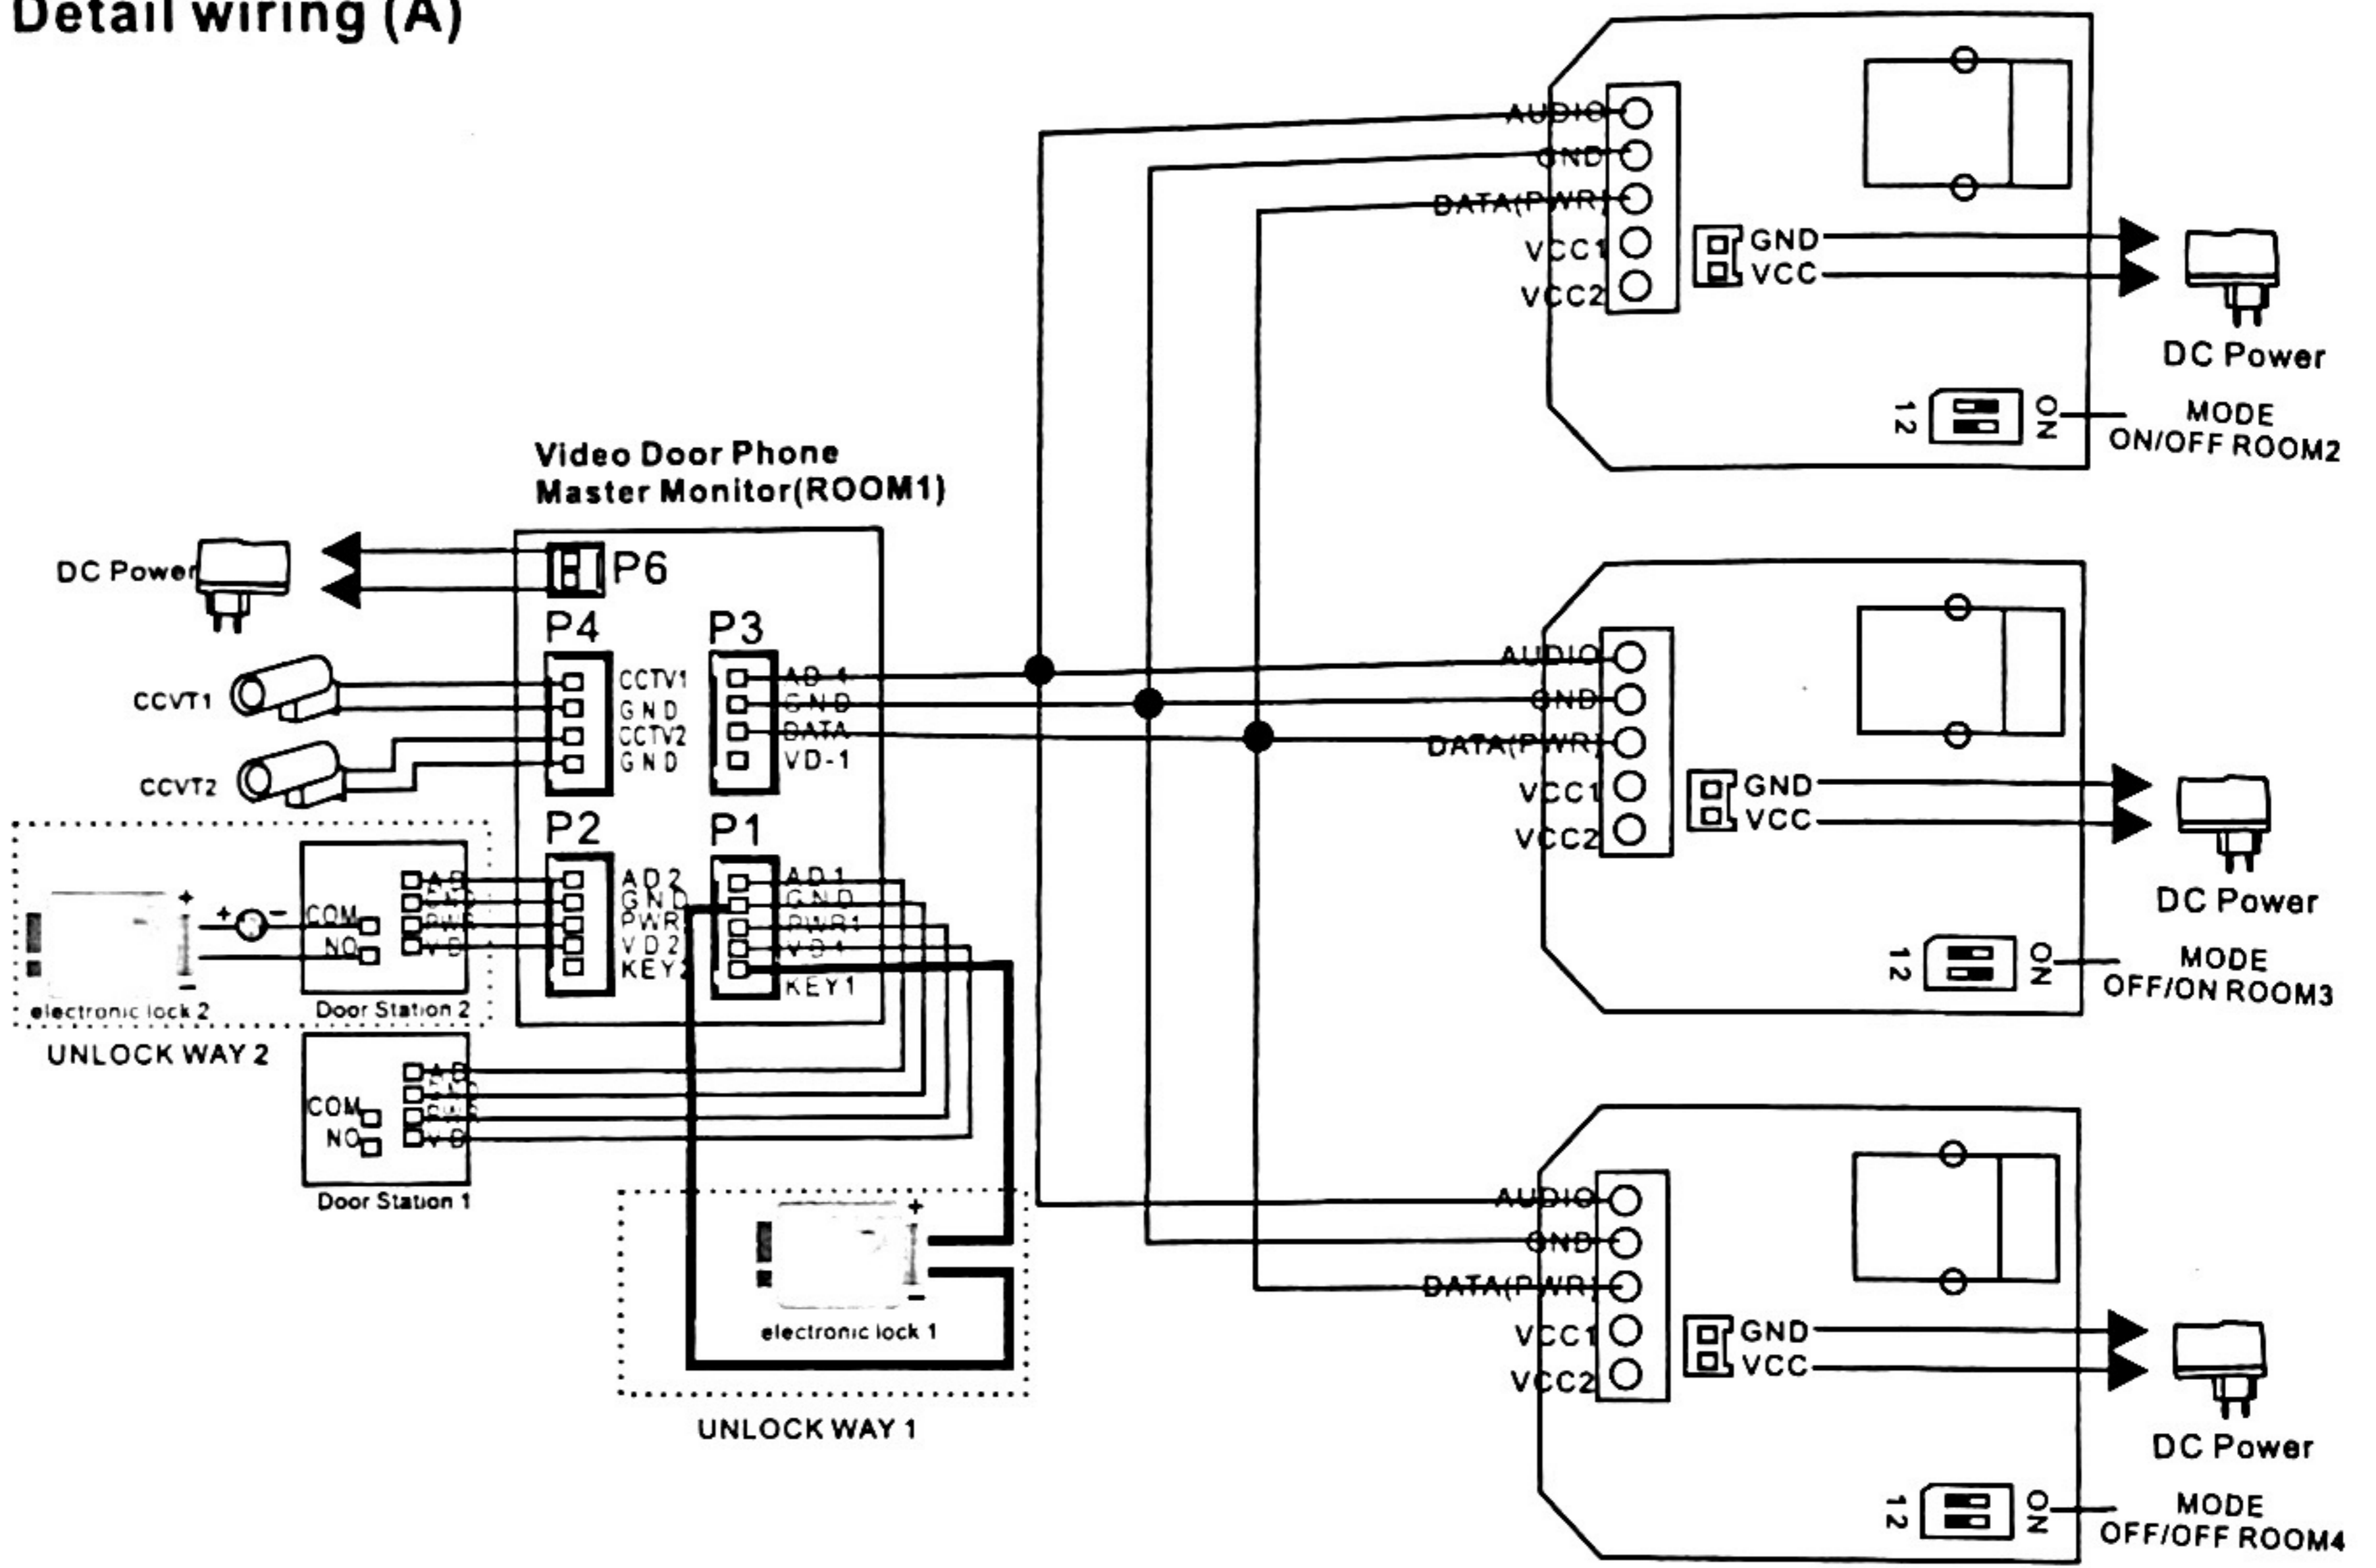

Detail wiring (B)

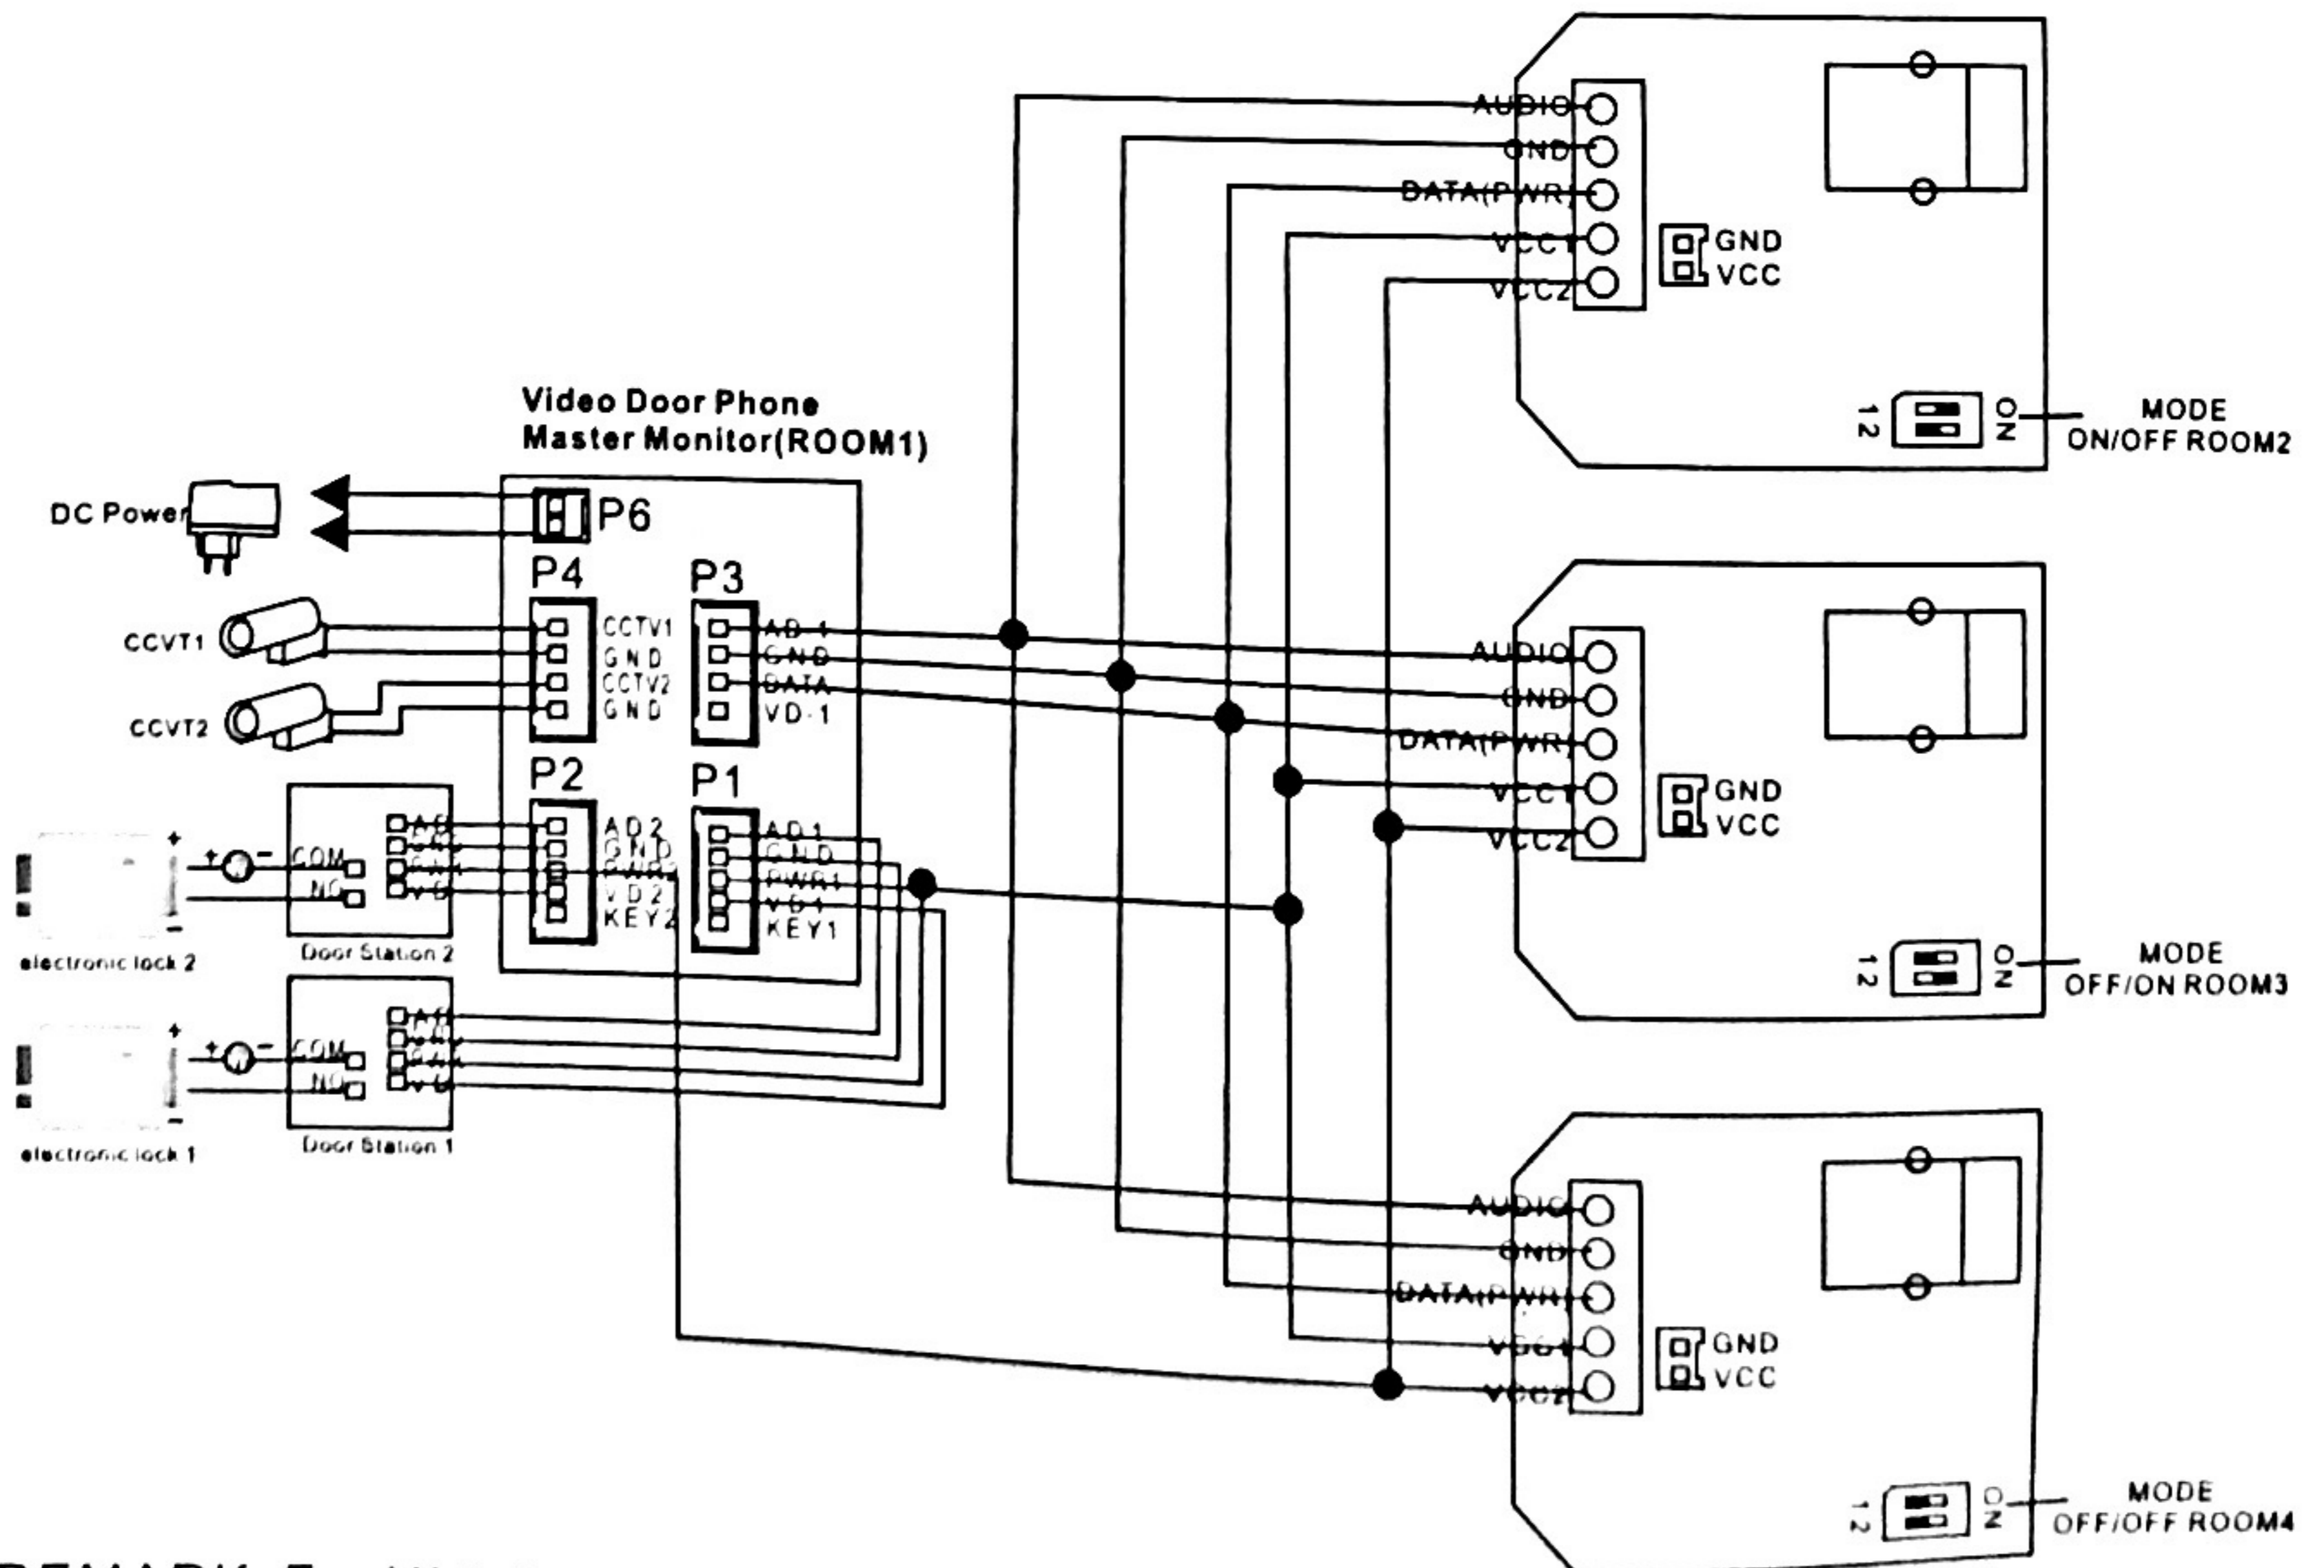

REMARK: For UNLOCK WAY 1, the PORT 1/3 must have 5 pins, and the monitor must support provide power for unlocking work.

(2) Work in apartment video/audio door phone system

Diagram (A): Apartment audio door phone system


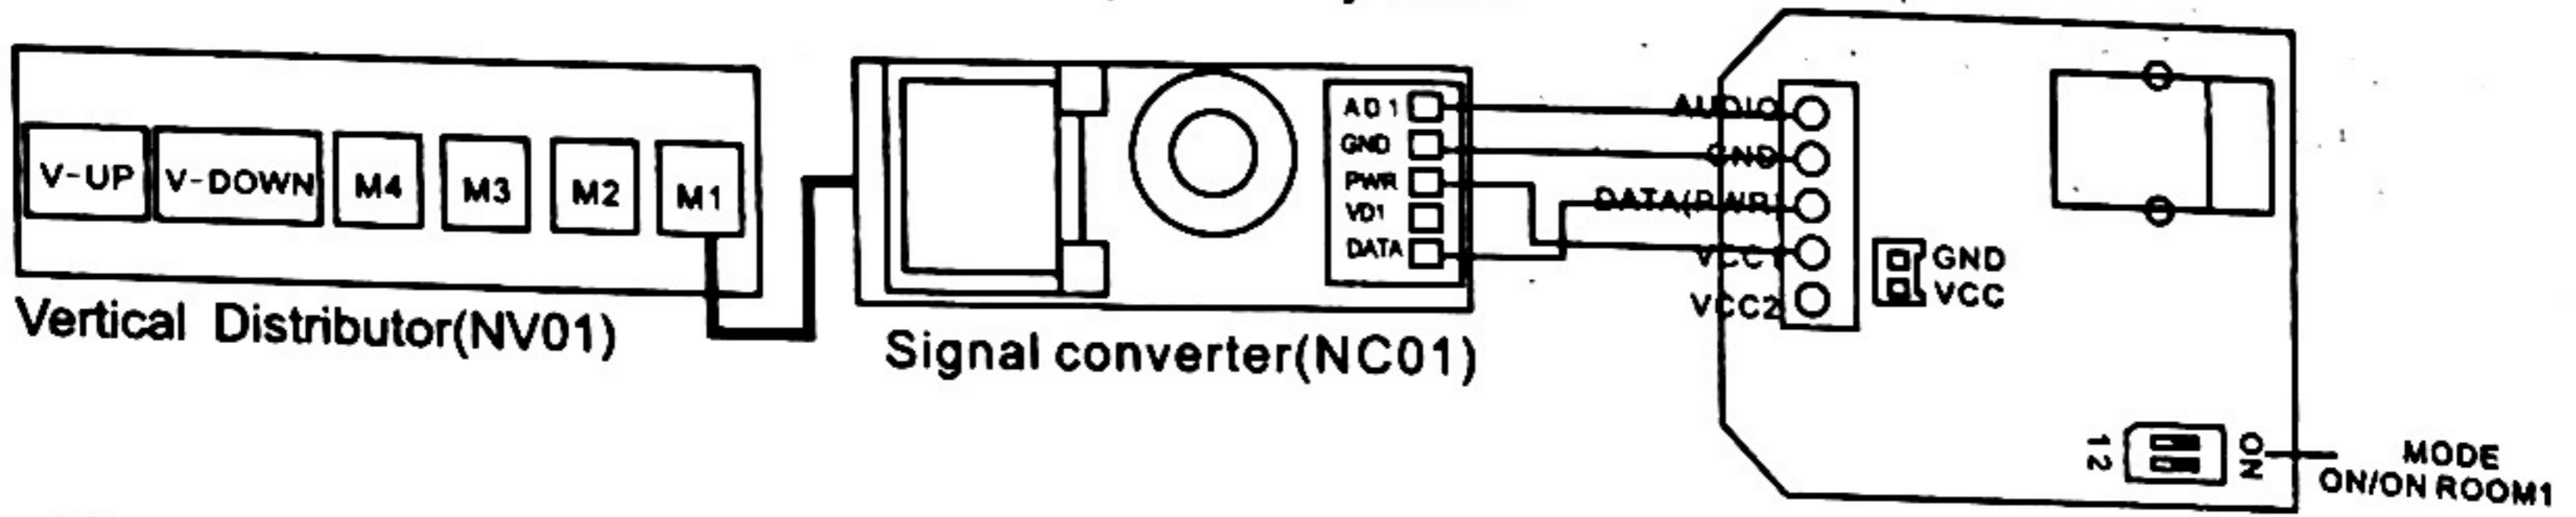


Diagram (B): Work as extension handsets for Apartment video door phone system

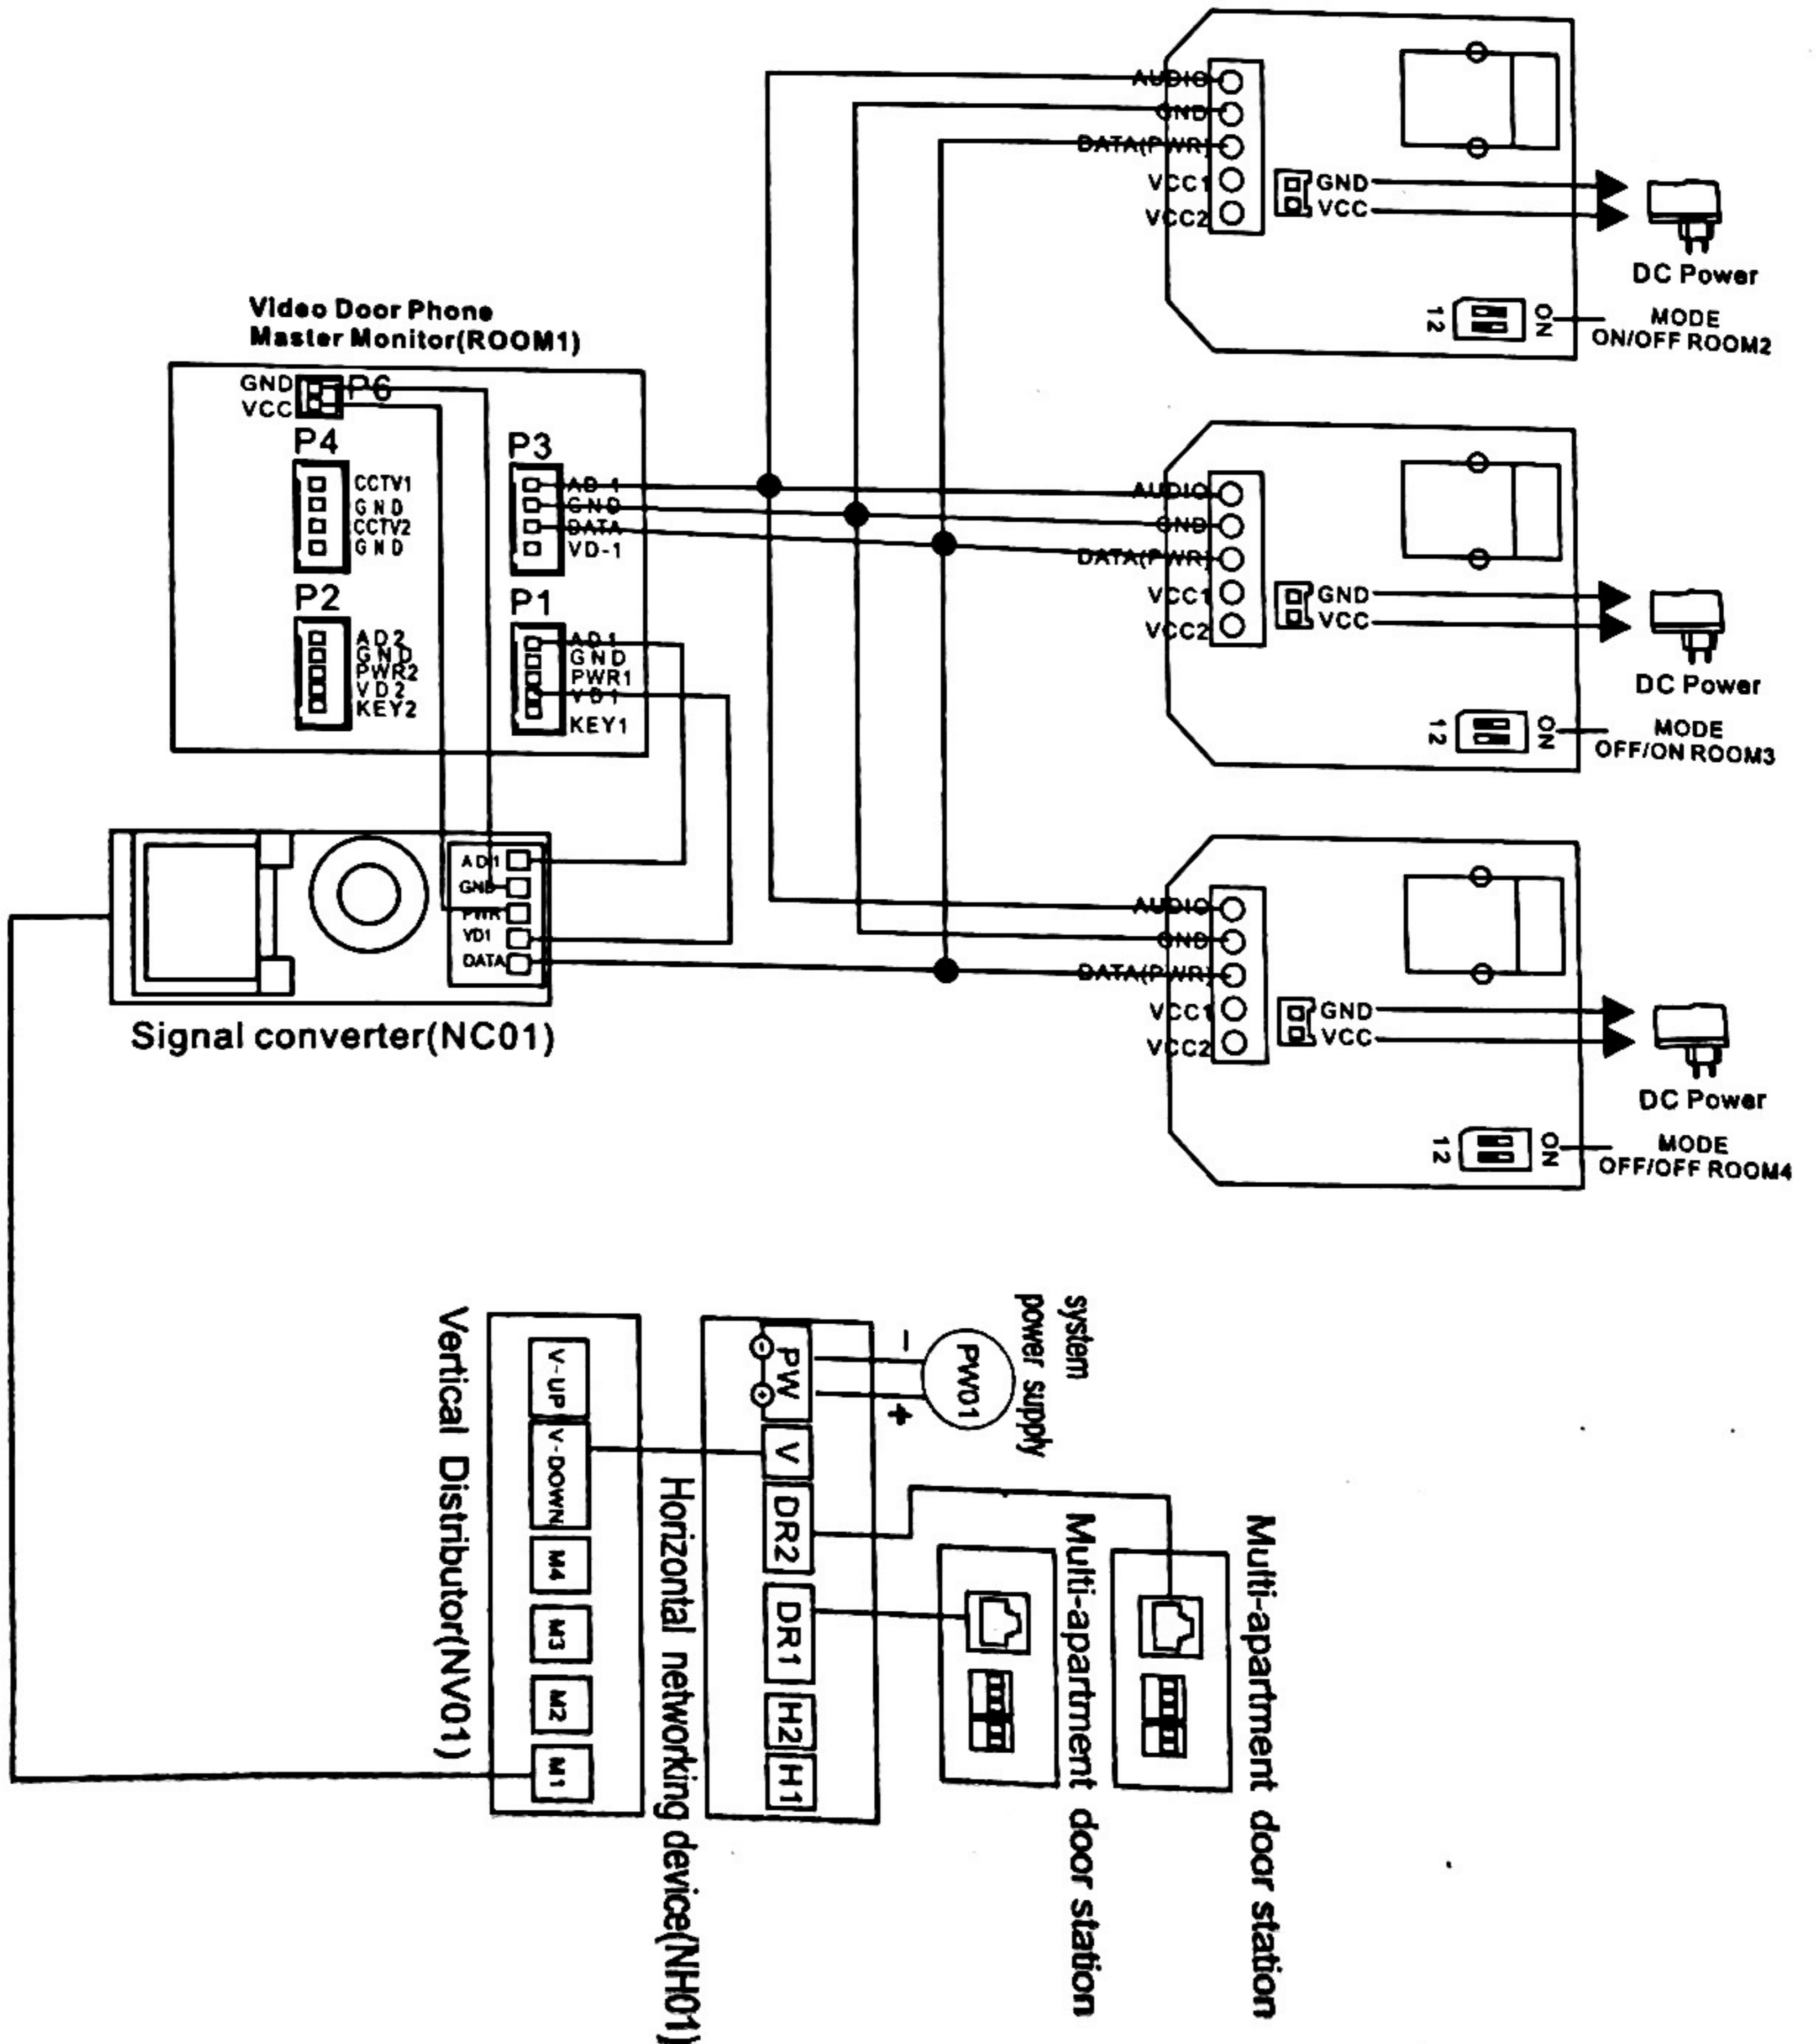

5. Operation guide

5.1 How to answer the call?

When someone presses the door station, all the audio door phone shall ring, you can pick up the handset to talk with the visitor.

Press UNLOCK button can unlock the door for the visitor.

5.2 How to set ROOM NUMBER in apartment system.

(1) Connect a video door phone indoor monitor and extension handsets as the Diagram (B) in Page 5.

(2) Set the ROOM NUMBER in the video door phone indoor monitor. Detail process please refer to the apartment system installation guide.

(3) Set the coding switch of the audio handset to be ROOM2/3/4 state.

(4) Press and hold the setting button on the audio handset, and press the monitor button on the video door phone(master monitor), after the green LED flashing, the ROOM NUMBER is saved in the audio handset. Restart the power the power for the audio handset, the system will recognize the ROOM NUMBER of it.

If want the audio handset to be master monitor, please replace the video door phone indoor monitor by the audio handset, then change the coding switch to be ROOM 1.

5.3 How to adjust the CHIME VOLUME of the audio door phone?

It has 3 volume modes: silent, middle, high. The default volume is middle.

At standby state, press the CALL button of the audio door phone, it shall chime. Press the CALL button again, it shall change to be HIGH volume. Press the CALL button again, it shall be silent mode.

5.4 How to MAKE INTERCOM?

At standby state, pick up the handset, press the CALL button, all the other video/audio phones in the same villa/flat shall chime, users can answer the call in another room.

Remark: If it's installed in an apartment system as master handset, press CALL button will call to security center.

6. Specifications

NO.	Items	Content
1	Power Input	DC12-15V 0.1A
2	Power consumption	0.8W(Max) 0.2W(standby)
3	Operation temperature	0°C to +40°C
4	Operation humidity	0%-95%
5	Answering Model	handset
6	Wire connection	3/4 /5 wires
7	Dimension	210mm*80mm*67mm
8	weight	200g

7. Package contents

