

ELENOS

ELT/ELR

USAGE INSTRUCTION

ELENOS

Connected a 50 Ω load or 50 Ω antenna to the RF output, connect the equipment into a mains supply (100÷240 VAC) with earth point. The transmitter equipment is factory pre-set to 0.0 W.

Switch ON the power switch and the yellow V POWER led will light.

The Display will show:



After 3 seconds the green PLL LOCK led will light and the Display will show an increasing bar, after a further 5 seconds the green ON AIR led will light and there will be output power.



At this point the Display will show the next parameter for the transmitter:

- Level Modulation (MOD >■■■■■■■□■■■);
- Forward Power (FRW 5.0W);
- Reflected Power (RFL 0.1W);



instead for the receiver:

- Level Modulation (MOD >■■■■■■■□■■■);
 - Level Signal(50dBuV).
-

ELENOS

MOD > ■■■■■■ □	<input type="checkbox"/>	SELECT
SGN 50dBuV	<input type="checkbox"/>	SET

To display the frequency push the SET key.
In order to display the parameter push the SELECT key.

Display Password

The Password mode is factory set to enable, and is not possible change this SET.

The default password is 1 2 3.

The WAIT of changing the password is as follows:

- Press for 3 seconds the SELECT key;

PASSWORD	<input type="checkbox"/>	SELECT
<u>0</u> 1 2 3 4 5 6 7 8 9	<input type="checkbox"/>	SET

- Press the SELECT key for move the underscore character position at the required digit, and press the SET key to confirm the digit.

PASSWORD *	<input type="checkbox"/>	SELECT
0 1 2 3 4 5 6 7 8 9	<input type="checkbox"/>	SET

Carry out the same operation for the two remaining digits.

PASSWORD * * *	<input type="checkbox"/>	SELECT
0 1 2 3 4 5 6 7 8 9	<input type="checkbox"/>	SET

- If the password is corrected press SET key to confirm, otherwise press SELECT key to leave the choice.
-

ELENOS

CONFIRM (Y/N) ? N=SEL. Y=SET.	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

If the password is not corrected an error is displayed:

ERROR PASSWORD	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

After few seconds display will show again the parameters.

- When the password is corrected the display will show:

NEW PASS . = SEL . NEW FREQ . = SET .	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

To change the password press the SET key.
To change the frequency press the SELECT key.

- For changing the password proceed at the same method for the required password:

NEW PASSWORD <u>0</u> 1 2 3 4 5 6 7 8 9	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

The confirmation password will be required.

CONFIRMATION <u>0</u> 1 2 3 4 5 6 7 8 9	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

If the password is corrected the display will show:

ELENOS

**STORED
NEW PASSWORD**

SELECT

SET

If the confirmation password is wrong the display will show:

**ERROR
CONFIRMATION**

SELECT

SET

IMPORTANT NOTE

! BE CAREFULLY !

Once the password is set, it must be remembered otherwise neither can the frequency be changed or a new password entered.

Display Change of Frequency.

- Press 3 seconds the SELECT key and put the correct password, at this point press again the SELECT key:

**NEW PASS . = SEL .
NEW FREQ . = SET .**

SELECT

SET

- Press the SELECT key to change the digit and press the SET key to confirm the digit.

**FREQUENCY ?
MHz 300.000**

SELECT

SET

The underscore character move the position one place to the left.

ELENOS

When the five digit is changed the further press SET key confirm the new frequency.

At this operation follows the WAIT cycle and after this the display will show the parameters:

MOD > ■■■■■■ □ FRW 8.0W RFL 0.0W	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

After 7 minutes the display light switch off and the display will show:

ELENOS MHz 300.000	<input type="checkbox"/> SELECT
	<input type="checkbox"/> SET

