



# ***T-Harness***

# ***Koppeladapters***

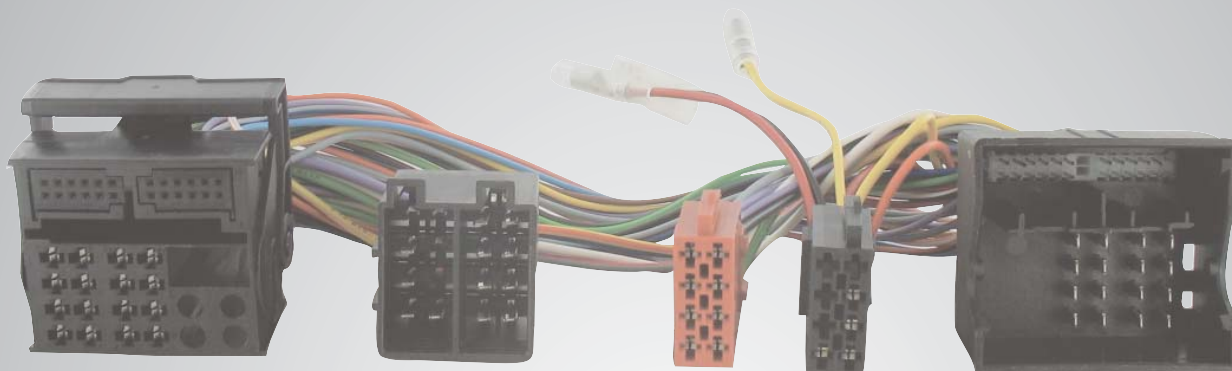

## **T-HARNESS - KOPPELADAPTER**

***These T-harnesses can be used for simple connection with 2 times 8pins ISO male – female with specific car type radio adapters (OEM).***

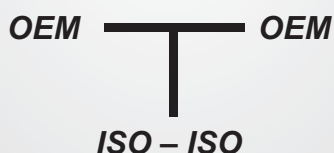

***This type of connection makes it possible to put in for example a Parrot or THB Bury carkit and getting the sound through the 2 front speakers. You can also use these T-harnesses for connecting multimedia systems (for example ISOTEC) and navigation systems such as Tom Tom and Pioneer.***

***Please be aware that these T-harnesses are designed for professional use only!***

***For the latest new types in this range we would like to refer to our website;  
[www.tomacarparts.nl](http://www.tomacarparts.nl)***

***For specific technical questions we would like to refer to the following e-mail address;  
[support@tomacarparts.nl](mailto:support@tomacarparts.nl)***

***[www.tomacarparts.nl](http://www.tomacarparts.nl)***


### ***Important notes***

- ***The added system has to be equipped with a working mute system.***
- ***Be convinced that the radio system is provided with a mute function. First activate if necessary.***
- ***The TCP T-harnesses are also suited for cars equipped with original active and amplifier systems. So it is of utmost importance that you know which kind of original system and radio connector is in the car.***
- ***After installing the T-harness we first advise to check the functions of the audio present in the car without connecting the carkit or multi media system. Also a check on the 8 pin ISO power adapter +15 / +30 / ground is necessary.***
- ***If TCP indicates “no +15 in TCP harness” never get a +15 out of the radio harness. Get this from the fuse box and install a separate fuse (2Amp). Never get the +15 for these cars from the ignition.***
- ***TCP does not take any responsibility for the given types and wrongly installed harnesses and any damage which maybe occur from this.***

### ***Installation regulation TCP T-Harnesses***

- 1) Take the car keys out of the ignition before removing the radio***
- 2) Remove the radio with the TCP removal keys, info on [www.tomacarparts.nl](http://www.tomacarparts.nl) 12.28 program***
- 3) Always check the pin positions of the +15 & +30 & ground***
- 4) Some cars do not have a save +15. Therefore our T-Harnesses are equipped with a long cable to safely get this +15 from the fuse box***
- 5) Always test the audio first after installing the T-harness and before installing the carkit or multimedia system***
- 6) Always check the installation manual of the to be connected carkit or multimedia system***
- 7) Before activating the carkit or multimedia system always put the ignition on the accessory position for a period of 20 seconds minimum. In most cases this is the time needed to accept the added system in the car as a built-in system.***

ean 8715647823067

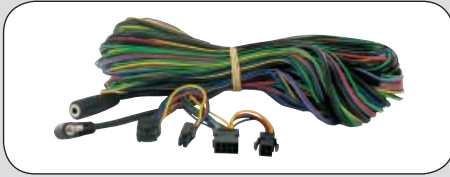

**20.1000-270**

Parrot display extension cable CK3000/ CK3100/ CK3300/ CK3500

*Cable length: 500 cm.*

ean 8715647823043




**20.1000-280**

Parrot display extension cable CK3100/ CK3200/ CK3300/ CK3500/ MK6000/ MKi 9000 serie

*Cable length: 500 cm.*

ean 8715647850230

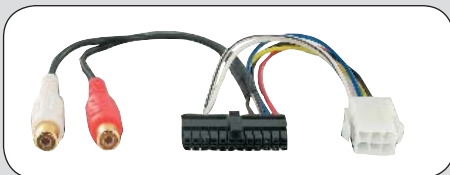

**20.1000-300**

Line in adapter MK6000/ MK6100/ MKi 9100/ MKi9200

ean 8715647849654




**20.1000-550**

THB Bury extension cable CC9040/ CC9060


*Cable length: 500 cm.*

ean 8715647849791

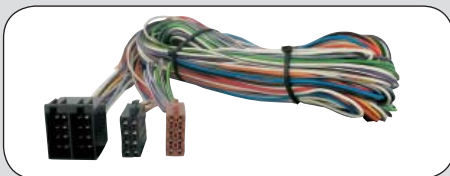


**20.1000-400**

2 X 8 ISO 400 cm. extension cable

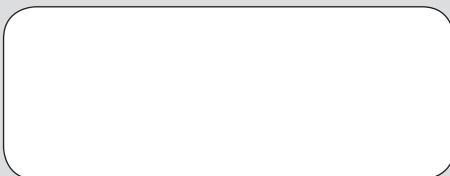

ean 8715647817103

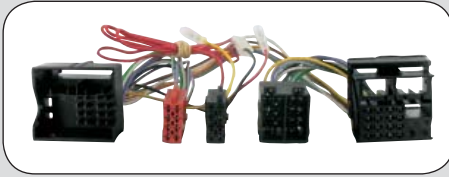


20.1320-902



A2	2004 --> Symphony radio/ Navi-Plus MMI system
A3	2005 --> Symphony radio/ Navi-Plus MMI system
A4	2005 --> Chorus-Concert Symphony/ Navi-Plus MMI system
A4 Allroad	2005 --> MMi Basic 4 speaker system
A4	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A5	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A6	2004 --> MMi Basic 4/ 8 speaker system
Q7	2006 --> MMi Basic 8 speaker system
R8	2006 --> Chorus system
TT	2007 --> without sound system

ean 8715647849807

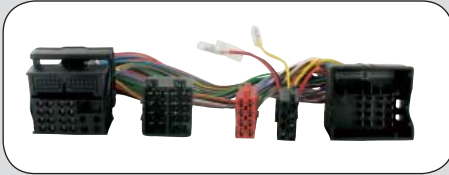


20.1320-910



Pre wired for steering wheel control

A2	2004 --> Symphony radio/ Navi-Plus MMI system
A3	2005 --> Symphony radio/ Navi-Plus MMI system
A4	2005 --> Chorus-Concert Symphony/ Navi-Plus MMI system
A4 Allroad	2005 --> MMi Basic 4 speaker system
A4	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A5	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A6	2004 --> MMi Basic 4/ 8 speaker system
Q7	2006 --> MMi Basic 8 speaker system
R8	2006 --> Chorus system
TT	2007 --> without sound system

ean 8715647828482

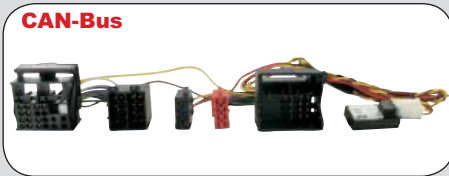


20.1320-925



A2	2004 --> Symphony radio/ Navi-Plus MMI system
A3	2005 --> Symphony radio/ Navi-Plus MMI system
A4	2005 --> Chorus-Concert Symphony/ Navi-Plus MMI system
A4 Allroad	2005 --> MMi Basic 4 speaker system
A4	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A5	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A6	2004 --> MMi Basic 4/ 8 speaker system
Q7	2006 --> MMi Basic 8 speaker system
R8	2006 --> Chorus system
TT	2007 --> without sound system

ean 8715647849814

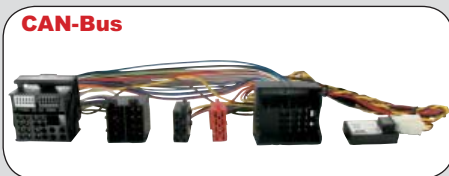


20.1320-926



Pre wired for steering wheel control

A2	2004 --> Symphony radio/ Navi-Plus MMI system
A3	2005 --> Symphony radio/ Navi-Plus MMI system
A4	2005 --> Chorus-Concert Symphony/ Navi-Plus MMI system
A4 Allroad	2005 --> MMi Basic 4 speaker system
A4	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A5	2007 --> MMi Basic 4/ 8 speaker system/ Without navi
A6	2004 --> MMi Basic 4/ 8 speaker system
Q7	2006 --> MMi Basic 8 speaker system
R8	2006 --> Chorus system
TT	2007 --> without sound system

ean 8715647839235

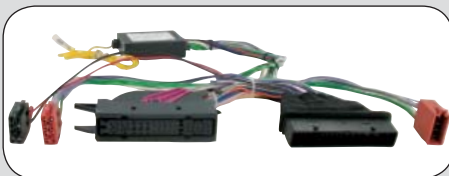

20.1320-896




A4	2008 -->
A5	2007 -->

Equipped with a standard sound system

For correct use of the adapter use one of the extension cables on page 3

ean 8715647839242

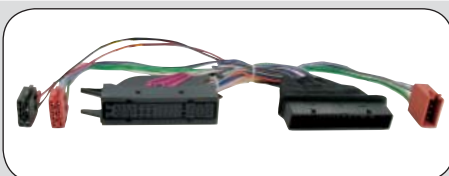

20.1320-897



A4	2008 -->
A5	2007 -->

Equipped with a MMi Basic plus sound system

For correct use of the adapter use one of the extension cables on page 3



**T - Harness**

**Koppeladapters**

ean 8715647839297



**20.1320-898**




A4                    2008 -->  
A5                    2007 -->

*Equipped with MMi Premium sound system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647814867

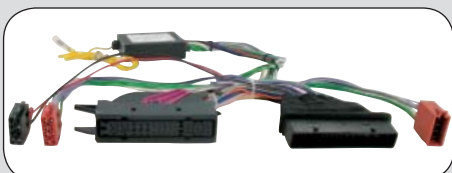

**20.1320-870**




A6                    2006 -->  
Q7                    2006 -->

*Equipped with a Bose 6000 system (black amplifier)*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647823203

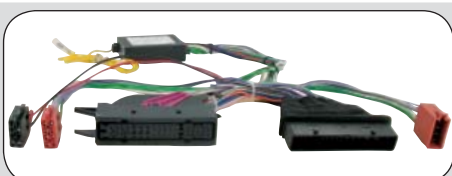

**20.1320-880**




A6                    2006 -->  
Q7                    2006 -->

*Equipped with a Bose 6000 13 speaker system (silver amplifier)*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647823197

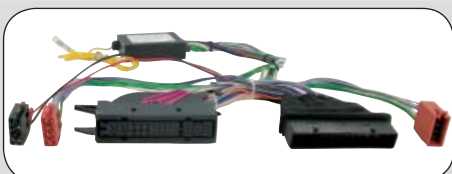

**20.1320-890**




A6                    2006 -->  
Q7                    2006 -->

*Equipped with a MMi & MMi Basic Plus DSP 11 speaker system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647838603

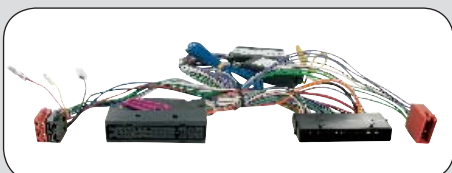

**20.1320-895**



A8                    2004 -->

*Equipped with a Bose 12 speaker sound system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647849821



**20.1320-915**




All models 2005 --> with 40 ways Most adapter and "phone in" function.

*Without navigation system. With or without amplifier.*

*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

ean 8715647808361

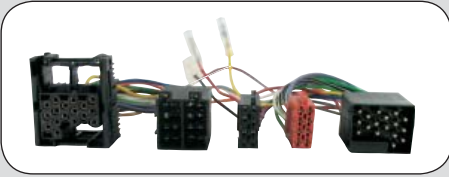

20.1020-902




3 serie E30	--> 1990
3 serie E36	--> 1998
3 serie E46	--> 2005
5 serie E39	--> 2003
7 serie E38	--> 1999

8 serie E31	--> 2001
Mini Cooper	--> 2005
X5	--> 2001
Z3	--> 2001
Z8	--> 2001

If the car is equipped with a navigation system, use one of the extension cables on page 3

ean 8715647808378

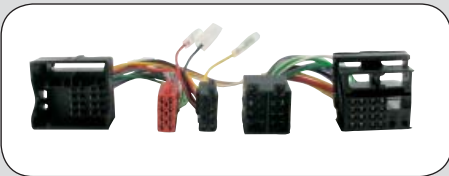

20.1024-902




1 serie	--> 2005
3 serie E46	--> 2005
3 serie E90	2005 -->
5 serie E39	2003 --> 2005
5 serie E60/ E61/ M5	--> 2006

X3	--> 2005
X5	--> 2006
Z3	2001 --> 2002
Z4	2003 --> 2006
Mini Cooper	--> 2005

If the car is equipped with a navigation system, use one of the extension cables on page 3

ean 8715647849838

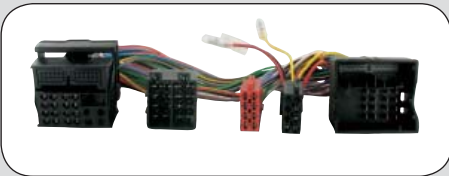

20.1024-911




1 serie	--> 2005
3 serie E46	--> 2005
3 serie E90	2005 --> 2006
5 serie E39	2003 --> 2005
5 serie E60/ E61/ M5	--> 2006

X3	--> 2005
X5	--> 2006
Z3	2001 --> 2002
Z4	2003 --> 2006
Mini Cooper	--> 2005

Pre wired for steering wheel control/ If the car is equipped with a navigation system, use one of the extension cables on page 3

ean 8715647817547

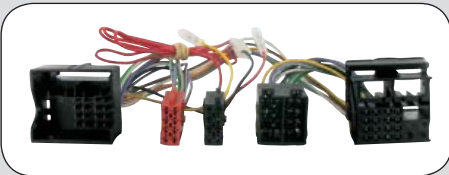

20.1021-902




1 serie	2005 -->
3 serie E46	2005 -->
3 serie E90	2006 -->
5 serie E39	2005 -->
5 serie E60	2006 -->

X3	2005 -->
X5	2006 -->
Z3	2002 -->
Z4	2006 -->
Mini Cooper	2005 -->

If the car is equipped with a navigation system, use one of the extension cables on page 3

ean 8715647849845

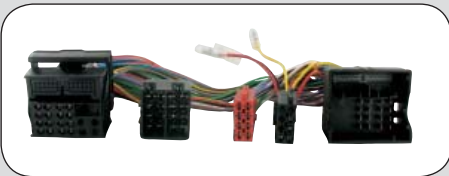

20.1021-910




1 serie	2005 -->
3 serie E46	2005 -->
3 serie E90	2006 -->
5 serie E39	2005 -->
5 serie E60	2006 -->

X3	2005 -->
X5	2006 -->
Z3	2002 -->
Z4	2006 -->
Mini Cooper	2005 -->

Pre wired for steering wheel control/ If the car is equipped with a navigation system, use one of the extension cables on page 3

ean 8715647828499

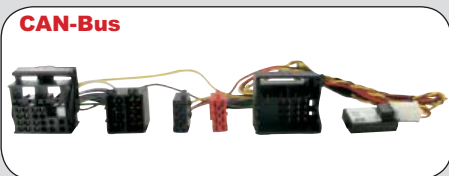

20.1024-925



1 serie	2005 -->
3 serie E46	2005 -->
3 serie E90	2006 -->
5 serie E39	2005 -->
5 serie E60	2006 -->

X3	2005 -->
X5	2006 -->
Z3	2002 -->
Z4	2006 -->
Mini Cooper	2005 -->

If the car is equipped with a navigation system, use one of the extension cables on page 3

**T - Harness**

**CAN-Bus**

ean 8715647849852



**20.1024-926**



1 serie	2005 -->	X3	2005 -->
3 serie E46	2005 -->	X5	2006 -->
3 serie E90	2006 -->	Z3	2002 -->
5 serie E39	2005 -->	Z4	2006 -->
5 serie E60	2006 -->	Mini Cooper	2005 -->

*Pre wired for steering wheel control/ If the car is equipped with a navigation system, use one of the extension cables on page 3*

ean 8715647827270



**20.1025-902**






All models      2006 -->


*Equipped with a Logic 7 sound system*

*For correct use of the adapter use one of the extension cables on page 3*

**Koppeladapters**

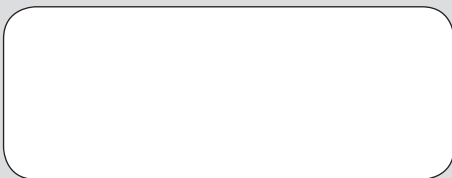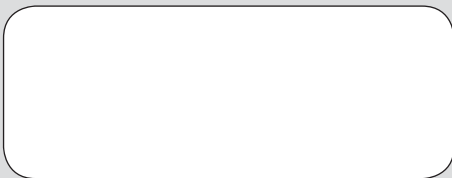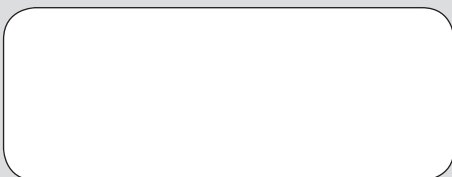

ean 8715647827348

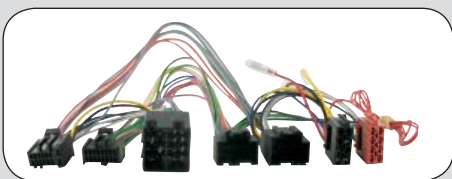


20.1271-903



BLS  
DTS

2006 -->  
2006 -->

ean 8715647838610



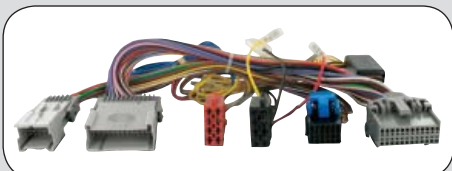


20.1038-902



Escalade

--> 2006

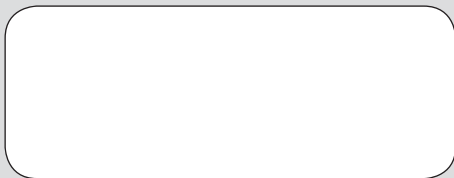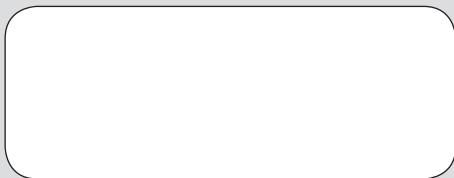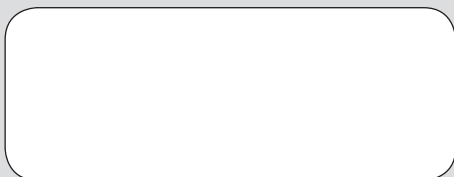



## T - Harness

ean 8715647826204




20.1087-902



Avalanche	2007 -->
Aveo	2006 -->
Captiva	2006 -->
Cobalt LT	2007 -->
Epica	2006 -->
Equinox	2007 -->
Impala	2006 -->

Malibu	2006 -->
Monte Carlo	2006 -->
Silverado	2007 -->
Suburban	2007 -->
Tahoe	2007 -->

ean 8715647809054

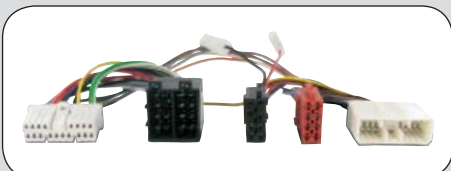


20.1086-902



Espero	1995 --> 1997
Kalos	1997 --> 2003
Lanos	1997 --> 2003
Leganza	1997 --> 2004
Nexia	1995 --> 2004

Nubira	1997 --> 2003
Matiz	1998 --> 2004
Optra	1995 --> 2004
Tacuma	2000 --> 2002

ean 8715647838610

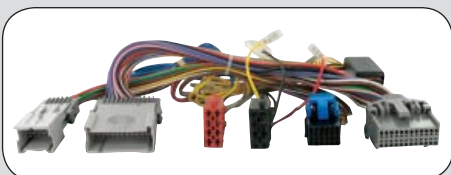


20.1038-902




Astro	--> 2006
Blazer CK	--> 2006
Colorado	--> 2006
Express Van	--> 2006
Uplander	--> 2006

## Koppeladapters

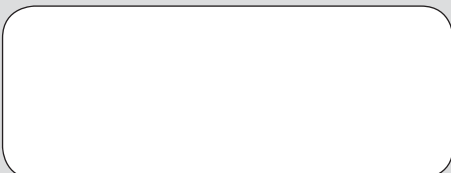

ean 8715647809207

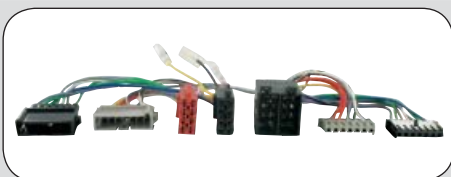


20.1030-902



300 M	--> 2001
Grand Voyager	--> 2001
Le Baron	--> 2001
Neon	--> 2001
PT Cruiser	--> 2001
Saratoga	--> 2001
Sebring	--> 2001

Stratus	--> 2001
Vision	--> 2001
Voyager	--> 2001

ean 8715647808385

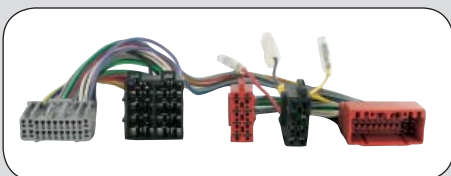


20.1031-902



300 M	2002 --> 2006
PT Cruiser	2005 --> 2006
Sebring	2005 --> 2007
Grand Voyager	2005 --> 2008
Voyager	2005 --> 2008

*For models without Canbus*

ean 8715647828475

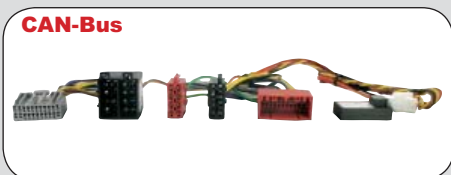

20.1031-925




**CAN-Bus**

300 M	2002 -->
Neon	2002 -->
PT Cruiser	2002 --> 2005
Sebring	2001 --> 2005
Grand Voyager	11 - 2001 --> 2005
Voyager	11 - 2001 --> 2005

*For models with Canbus*

ean 8715647838542

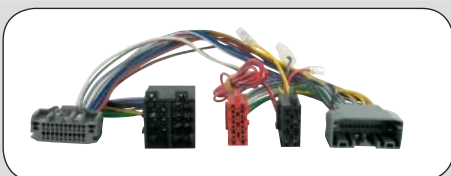


20.1035-902



300 - 300M	2006 -->
Grand Voyager	2008 -->
PT Cruiser	2006 -->
Sebring	2007 -->
Town & Country	2008 -->
Voyager	2008 -->

ean 8715647838597

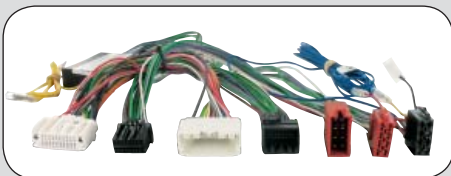


20.1035-903



300 - 300M	2006 -->
Grand Voyager	2008 -->
Sebring	2007 -->
Town & Country	2008 -->
Voyager	2008 -->

*Equipped with OEM amplifier.  
For correct use of the adapter use one of the extension cables on page 3*

ean 8715647849869

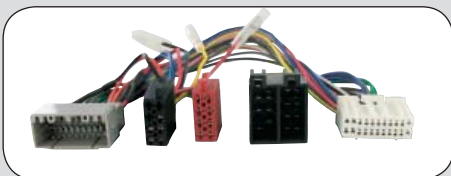

20.1035-904




300 - 300 M	2005 -->
Aspen	2007 -->
Grand Voyager	2004 --> 2007
PT Cruiser	2006 -->
Voyager	2005 --> 2007

*Equipped with Boston/ Infinity sound system.  
For correct use of the adapter use one of the extension cables on page 3*

**T - Harness**

**Koppeladapters**

ean 8715647849876

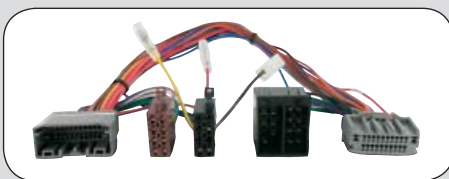

**20.1035-905**



Grand Voyager 2008 -->  
Sebring 2007 -->  
Voyager 2007 -->

*Equipped with Boston/Sound system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647844659






**20.1031-903**




Grand Voyager 2005 --> 2007  
Voyager 2005 --> 2007

*Equipped with OEM amplifier*

*For correct use of the adapter use one of the extension cables on page 3*

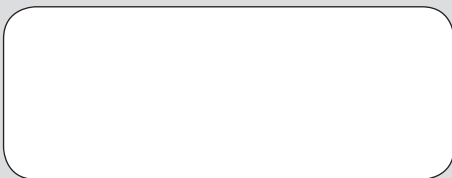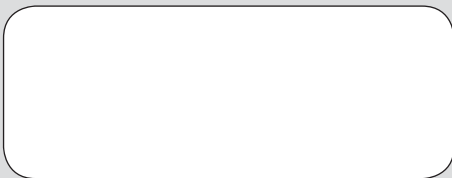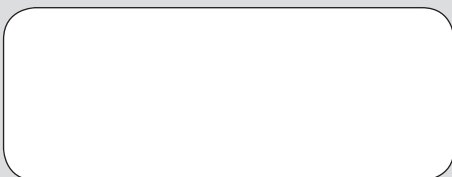

ean 8715647814300

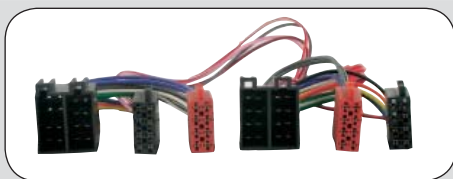


20.1040-902



AX	1989 -->		
BX	1989 -->		
C3	--> 2004		
C4	--> 2004		
XM	--> 1989		
Xsara	2002 --> 2005		

ean 8715647811781

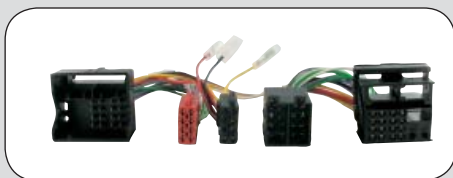


20.1041-901



C2	2004 -->	C5 II	2005 -->
C3	2005 -->	C5 III	2008 -->
C4	2005 -->	C6	2007 -->
C4 Picasso I & II	2005 -->	C8	2005 -->
C5 I			

ean 8715647849883

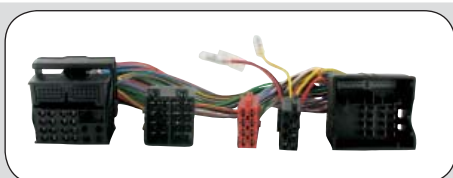

20.1041-910




C2	2004 -->	C5 II	2005 -->
C3	2005 -->	C5 III	2008 -->
C4	2005 -->	C6	2007 -->
C4 Picasso I & II	2005 -->	C8	2005 -->
C5 I			

*Pre wired for steering wheel control*

ean 8715647817578

**CAN-Bus**

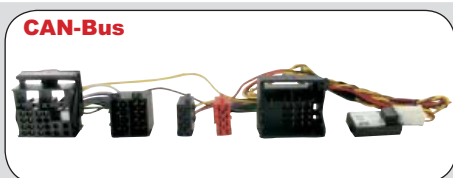


20.1041-902



C2	2004 -->	C5 II	2005 -->
C3	2005 -->	C5 III	2008 -->
C4	2005 -->	C6	2007 -->
C4 Picasso I & II	2005 -->	C8	2005 -->
C5 I			

ean 8715647849913

**CAN-Bus**

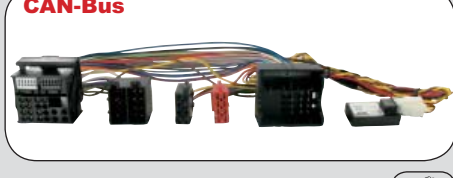

20.1041-926



C2	2004 -->	C5 II	2005 -->
C3	2005 -->	C5 III	2008 -->
C4	2005 -->	C6	2007 -->
C4 Picasso I & II	2005 -->	C8	2005 -->
C5 I & II			

*Pre wired for steering wheel control*

ean 8715647849890



20.1041-915



All models 2005 --> with 40 ways Most adapter and "phone in" function.

*Without navigation system. With or without amplifier. (JBL)*


*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

## T - Harness

## Koppeladapters

ean 8715647827294

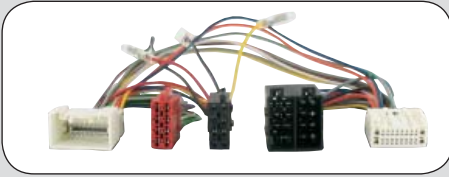


**20.1202-902**



C-Crosser 2007 -->

*Without navigation system and without amplifier*

ean 8715647826211

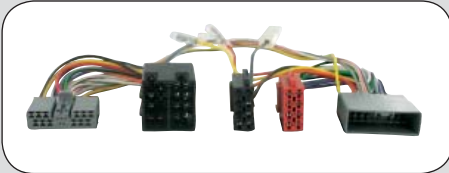

**20.1132-902**



C-Crosser 2007 -->

*With navigation system without amplifier*

ean 8715647833844



**20.1202-903**



C-Crosser 2007 -->

*Without navigation system with amplifier*

ean 8715647849920




**20.1202-904**



C-Crosser 2007 -->

*With navigation system and with amplifier*

ean 8715647849937

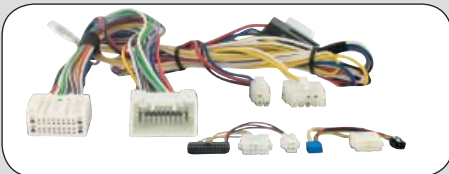

**20.1202-915**




C-Crosser 2007 -->

*Without navigation system. With or without amplifier. (Rockfort)  
With "phone in" function.  
Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

ean 8715647808415

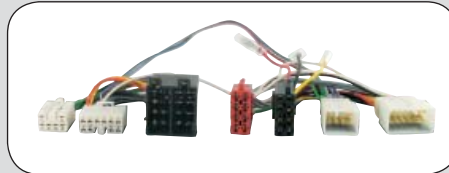


**20.1300-902**



Daihatsu all models 1993 -->



ean 8715647809207

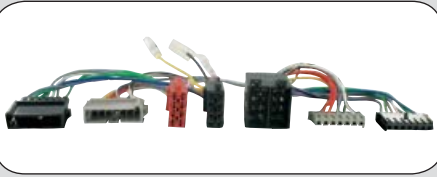


**20.1030-902**



Avanger	1995 --> 2000
Caravan	1988 --> 2000
Durango	1998 --> 2001
Intrepid	1994 --> 1997
Neon	1995 --> 1999
Viper	

ean 8715647838542

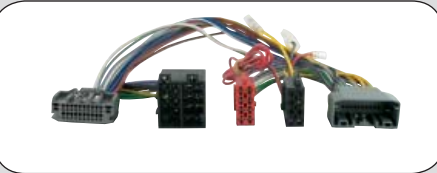


**20.1035-902**



Avanger	2007 -->
Caliber	2008 -->
Gran Caravan	2008 -->
Journey	2008 -->
Nitro	2007 -->

ean 8715647849869

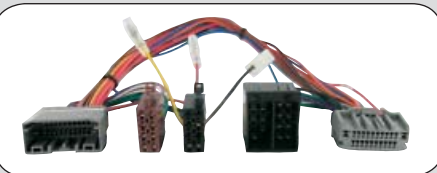

**20.1035-905**




Avanger	2007 -->
Gran Caravan	2008 -->
Nitro	2007 -->

*Equipped with Boston/ Sound system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647849876

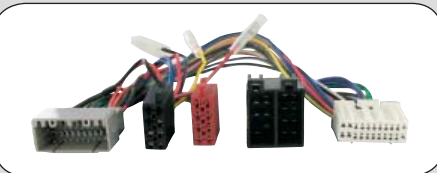

**20.1035-904**




Caliber	2007 -->
Charger	2006 -->
Magnum	2005 -->
Stratus	2006 -->

*Equipped with Boston/ Infinity system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647838597

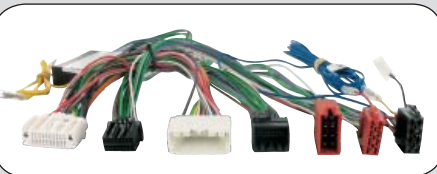

**20.1035-903**



Caliber	2008 -->
Gran Caravan	2008 -->
Nitro	2008 -->

*Equipped with OEM amplifier*


*For correct use of the adapter use one of the extension cables on page 3*



T - Harness

Koppeladapters

ean 8715647833363

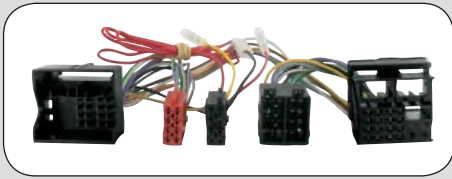


20.1094-902



Scudo

2007 -->

ean 8715647849944

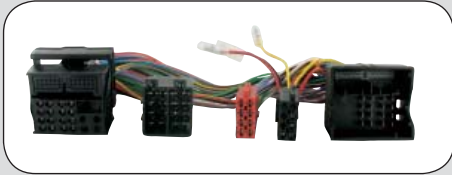

20.1094-910




Scudo

2007 -->

Pre wired for steering wheel control

ean 8715647809153


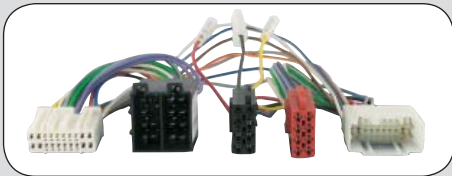


20.1131-902




Sedici

2006 -->

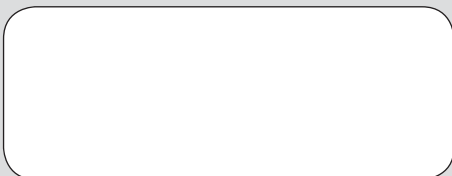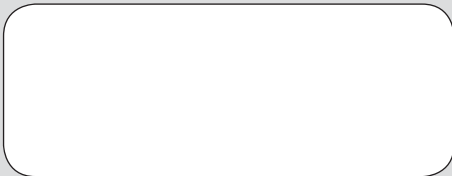

ean 8715647809191

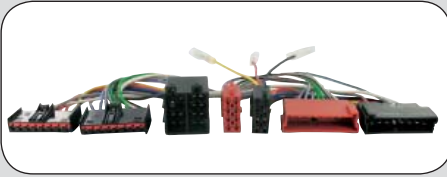


**20.1114-908**  
8 ways power connector



Cougar	1999 --> 2005
Courier	1996 -->
Escort	1996 --> 2001
Explorer	1993 --> 2005
Fiesta	1996 --> 2005
Focus	1999 --> 2004
Galaxy	2001 --> 2006

Ka	1997 --> 2005
Puma	2002 --> 2005
Maverick	1994 --> 2000
Mondeo	1993 --> 2003
Transit	1988 --> 2005
Transit Connect	2003 --> 2005
Scorpio	1995 --> 2000

ean 8715647809139

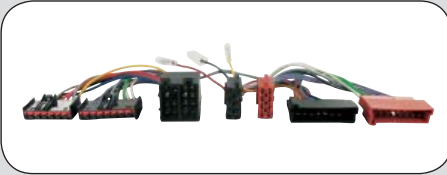


**20.1114-907**  
7 ways power connector



Escort	1995 --> 2000
Explorer	1993 --> 2005
Fiesta	1996 --> 2005
Focus	1999 --> 2004
Galaxy	2001 --> 2006
Ka	1997 --> 2005
Puma	1997 --> 2001

Maverick	1994 --> 2000
Mondeo	1993 --> 2003
Scorpio	1995 --> 2000
Transit	1995 --> 2005
Transit Connect	2003 --> 2005

ean 8715647809184

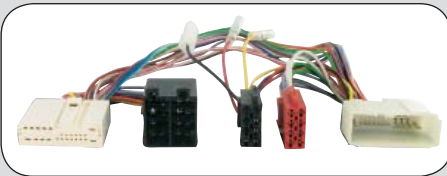

**20.1121-902**




Crown Victoria	1995 --> 2005
Escape	2005 -->
Expedition	2004 --> 2006
Fiesta	2002 --> 2005
Fusion	2003 --> 2005

Freestar	2004 -->
Mustang	2005 -->
Ranger	2004 --> 2006
Thunderbird	2002 --> 2005
F150	--> 2004

*Equipped with a Sony system*

ean 8715647808392

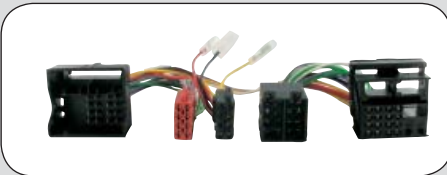


**20.1122-902**



Fiesta	2005 --> 2009
Focus	2005 --> 2007
Focus C-Max	2004 --> 2007
Fusion	2005 --> 2007
Galaxy	2006 --> 2007
Granada	2005 --> 2007

Kuga	2008 -->
Mondeo	2004 -->
S-Max	2007 -->
Transit	2007 -->

ean 8715647816380

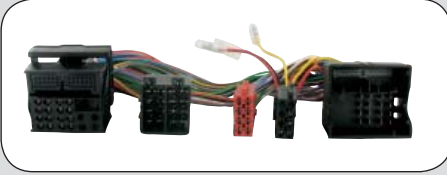

**20.1122-903**




Fiesta	2006 --> 2009
Focus	2005 --> 2007
Focus C-Max	2004 --> 2007
Mondeo	2004 --> 2007
S-Max	2007 -->

Fusion	2005 --> 2007
Galaxy	2006 --> 2007

*Pre wired for steering wheel control*

ean 8715647849616

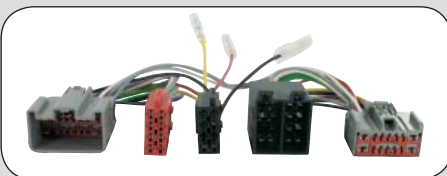

**20.1124-902**




Fiesta	2009 -->
--------	----------

**T - Harness**

**Koppeladapters**

ean 8715647809146

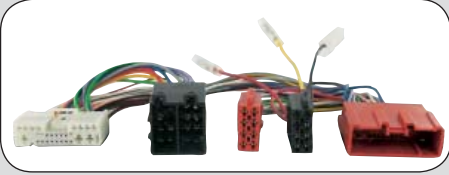


**20.1171-902**



Ranger 2007 -->

ean 8715647834032

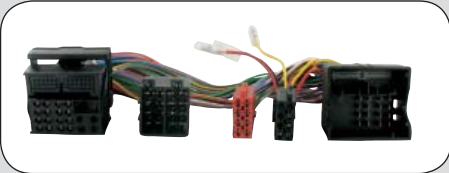


**20.1122-904**



All models EU 2007 -->  
Fiesta 2006 --> 2009

ean 8715647849951

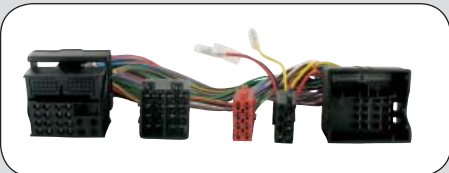

**20.1122-910**



All models EU 2007 -->  
Fiesta 2006 --> 2009

*Pre wired for steering wheel control*

EAN 8715647



**20.1122-915**




All models 2005 --> with 40 ways Most adapter and "phone in" function.

*Without navigation system. With or without amplifier.*

*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*


ean 8715647809184

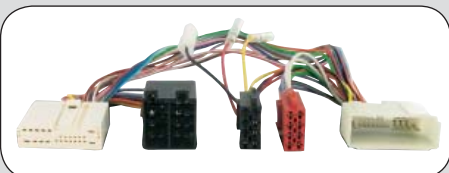

**20.1121-902**




Lincoln Aviator 2003 --> 2005  
Lincoln Navigator 2003 --> 2005  
Lincoln Town Car 2003 --> 2005  
Mercury Grand Marquis 1995 --> 2005  
Mercury Marauder 2003 --> 2005  
Mercury Montego 2005 -->  
Mercury Monterey 2004 --> 2005

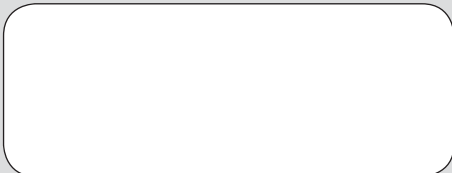

# General Motors/ Buick

T - Harness

Koppeladapters

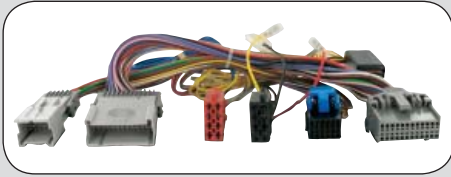

ean 8715647838610

20.1038-902



Canyon --> 2006  
Denali --> 2006  
Envoy --> 2006  
Safri --> 2006  
Savanna --> 2006  
Sierra 2006 -->

Sierra Denali --> 2006  
Yukon (XL) 2006 -->  
Yukon Denali --> 2006  
W3500 --> 2006




ean 8715647849968

20.1038-904



Bravada 1991 -->2001  
Centruy 1988 --> 1996  
Crew 1989 --> 1999  
Duallu 1989 --> 1999  
Electra 1988 --> 1990  
Express 1996 --> 2000  
GMC-Van 1988 --> 1995  
Hombre 1996 --> 2000  
Impala 1994 --> 1996  
La Sabre 1992 --> 1994  
Lumina 1990 --> 2001  
Malibu 1997 --> 2000  
Monte Carlo 1995 --> 1999  
Oldsmobile 1989 --> 1995  
Park Avanie 1988 --> 1994  
Pickup 1988 --> 2001  
Royale 1987 --> 1991  
Reatta 1989 --> 1991  
Regal 1988 --> 1994  
Riviera 1986 --> 1995  
Roadmaster 1991 --> 1994  
Yukon 1992 --> 2002

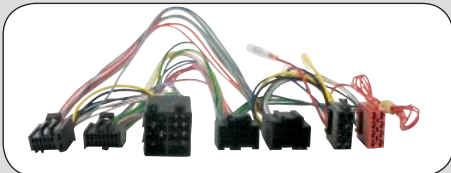


ean 8715647827348

20.1271-903



Pontiac Solstice 2007 -->  
Pontiac Torrent 2007 -->

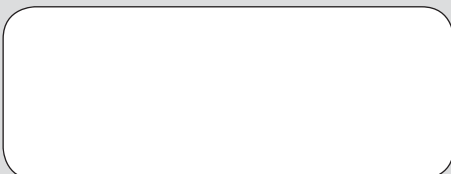





**T - Harness**

**Koppeladapters**

ean 8715647809177

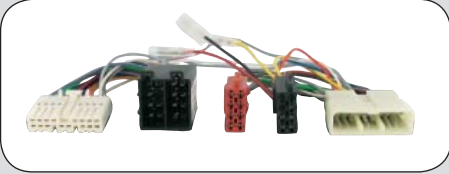


**20.1130-902**




All models --> 1998

ean 8715647809153

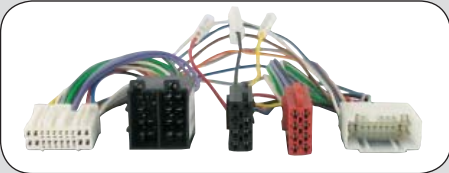


**20.1131-902**




Accord	1998 --> 2008	Jazz	2001 --> 2005
Civic	--> 2005	Logo	1999 --> 2005
CRV	--> 2006	Odyssey	2005 --> 2007
Element	2003 -->	Prelude	1997 --> 2001
FR-V	1999 --> 2005	Passport	1989 --> 2002
Getz	2002 -->	Pilot	2003 --> 2005
HRV	1999 --> 2005	Ridgeline	2006 -->
Insight	--> 2006	S2000	2000 --> 2003
Integra	1998 --> 2005	Shuttle	1996 --> 2000
Legend	1996 -->	Stream (van)	2001--> 2005

ean 8715647826211

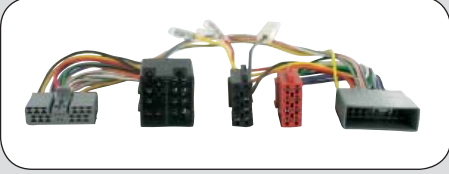


**20.1132-902**




Accord	2008 --> 2009
Civic	2006 -->
Civic Hybrid	2006 -->
CRV	2007 -->
Fit	2007 -->


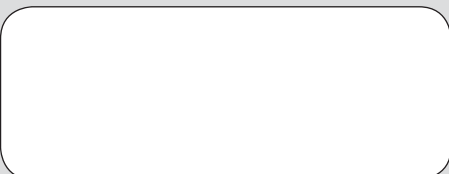
ean 8715647849609

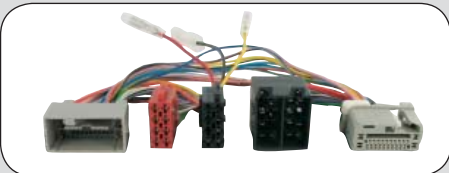

**20.1132-903**



Accord	2009 -->
Jazz	2008 -->
Pilot	2008 -->





# Hummer

## T - Harness

## Koppeladapters

ean 8715647827348

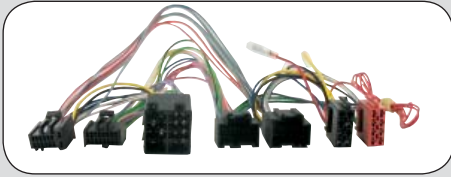


20.1271-903



H2

2008 -->

ean 8715647839273

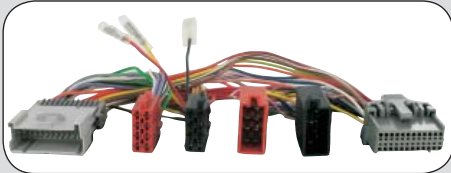

20.1138-902




H3

2007 -->



ean 8715647811798

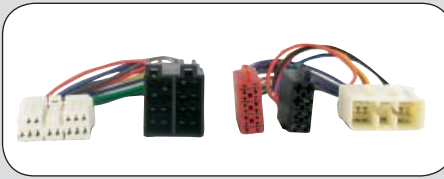


**20.1142-902**



Accent	1995 --> 1999	Sonata	1994 --> 1998
Atos EU3	2001 --> 2005	Pony	
Coupè	1997 --> 2001	SUV	
Elantra	1991 --> 2000	Truck	
H100	1994 --> 1996	Tiburon	1997 --> 1999

ean 8715647809160

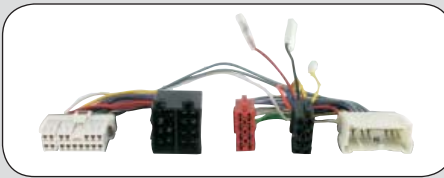

**20.1143-902**



Accent	1999 -->	Santa Fè	2001 --> 2005
Atos	1998 --> 2005	Sonata	1998 --> 2005
Coupè	2001 --> 2005	Sonica	--> 2006
Elantra	2001 --> 2005	Starex	1998 --> 2005
Getz	2002 --> 2005	Terracan	2001 -->
GX3TO	1999 -->	Trajèt	2000 --> 2005
H1	1998 --> 2005	Tucson	--> 2005
Matrix	2000 --> 2005	XG350	2002 --> 2005

ean 8715647817523




**20.1179-902**



Azera	2006 -->	H300	2008 -->
Accent	2005 -->	Lantra	2005 -->
Amica	2005 -->	Matrix	2005 -->
Atos	2005 -->	Tucson	2005 -->
Coupè	2005 -->	Trajèt	2005 -->
Elantra	2005 -->	Santa Fè	2006 -->
Getz	2005 -->	Sonata	2005 --> 2008
H1	2005 -->		

ean 8715647830171

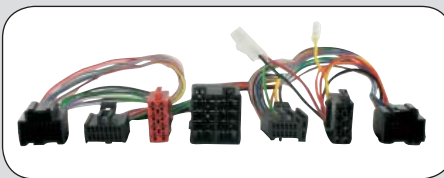


**20.1144-902**



i 30	2007 -->
------	----------

ean 8715647817448

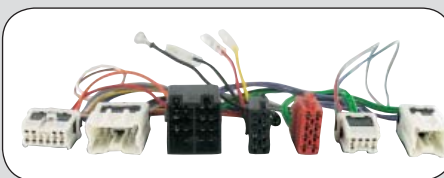


**20.1214-902**



Infiniti FX35	2004 -->
Infiniti FX45	2003 -->
Infiniti G20	1993 --> 2002
Infiniti G35	2002 --> 2007
Infiniti i35	2001 -->
Infiniti M45	2002 -->
Infiniti QX54	2004 -->

ean 8715647827287

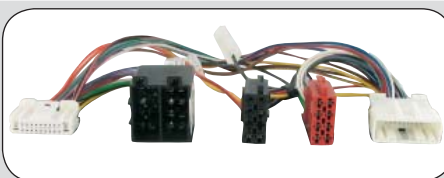

**20.1216-902**




Infiniti G35	2007 -->
--------------	----------

# Isuzu/ Jaguar/ Jeep

T - Harness

Koppeladapters

ean 8715647847995

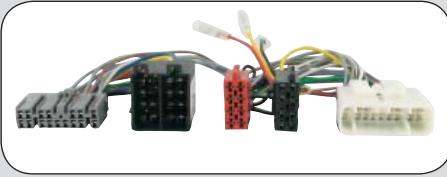


20.1099-902



Isuzu D-max 2007 -->  
Isuzu Rodeo 2007 -->

ean 8715647809191

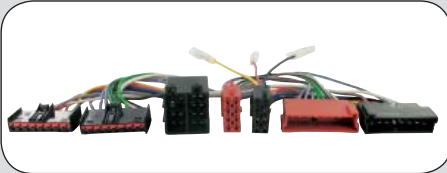


20.1114-908

8 ways power connector



Jaguar S-Type 1999 --> 2005  
Jaguar XJ6 1987 --> 1998  
Jaguar XJS 1975 --> 1996

ean 8715647809214

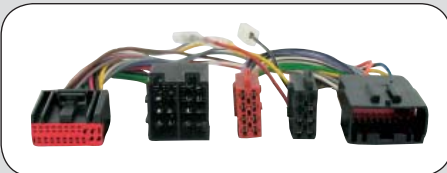


20.1148-902



Jaguar S-Type 2002 --> 2005

ean 8715647827263

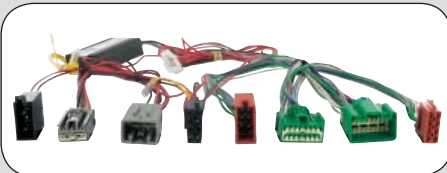


20.1358-902



Jaguar XKR 2007 -->  
*Equipped with Dolby Prologic surround system*

ean 8715647809207

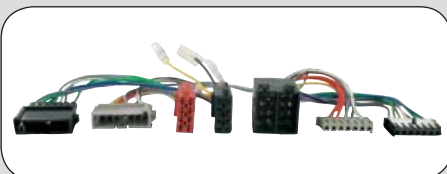

20.1030-902




Jeep Cherokee 1997 --> 2001  
Jeep Grand Cherokee 1993 --> 1998  
Jeep Wrangler 1997 --> 2002

**T - Harness**

**Koppeladapters**

ean 8715647808385

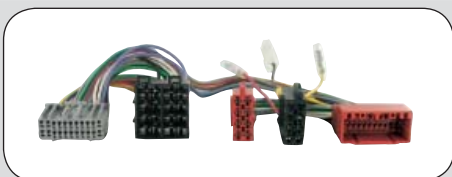


**20.1031-902**



Cherokee	2001 --> 2005
Grand Cherokee	2002 --> 2005
Wrangler	2003 --> 2006

ean 8715647828475

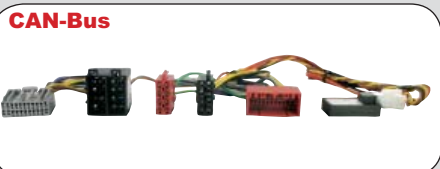


**20.1031-925**



Cherokee	2005 --> 2008
Grand Cherokee	2005 --> 2008
Wrangler	2006 --> 2008

ean 8715647838542

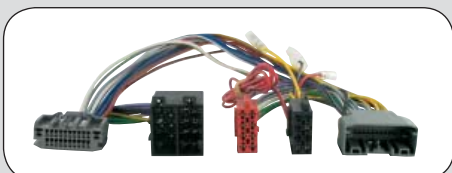


**20.1035-902**



Cherokee	2008 -->
Wrangler	2007 -->
Liberty	2008 -->

ean 8715647838597

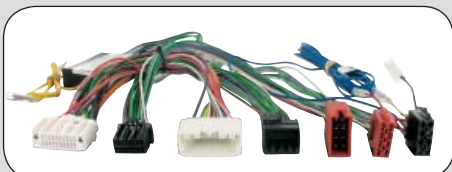

**20.1035-903**




Cherokee	2008 -->
Wrangler	2007 -->

*Equipped with OEM amplifier*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647849869

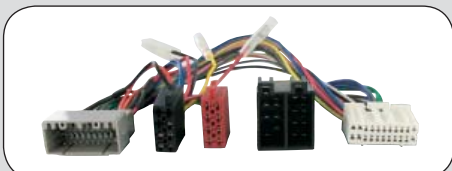

**20.1035-904**




Commander	2006 -->
Grand Cherokee	2005 --> 2007

*Equipped with Boston/ Infinity system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647849867

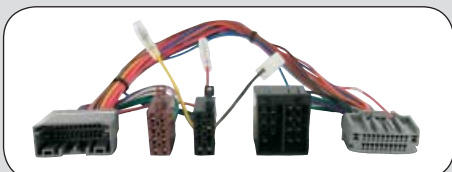

**20.1035-905**




Liberty	2008 -->
Wrangler	2007 -->

*Equipped with Boston/ Sound system*

*For correct use of the adapter use one of the extension cables on page 3*



ean 8715647847988

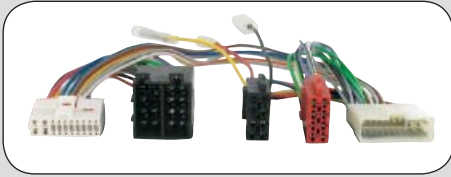


**20.1178-902**



Carens	--> 2002
Carnival	--> 2002
Clarus	--> 2002
Rio	--> 2001
Sephia	09 - 1995 -->
Shuma	--> 2001
Sportage	1999 --> 2004

ean 8715647809160

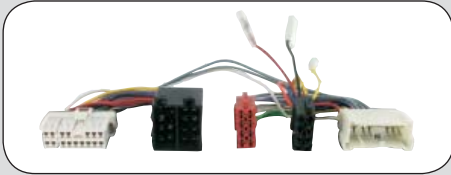

**20.1143-902**



Carens II	2002 -->	Rio II	2001 --> 2005
Carnival	2002 --> 2005	Sephia II	2001 --> 2005
Cerato	2005 -->	Shuma I + II	1998 --> 2005
Clarus	1997 --> 2000	Sorento	2002 --> 2006
Joice	12 - 1999 -->		
Magentis	2001 --> 2005		
Picanto	2005 --> 2007		

ean 8715647817523



**20.1179-902**





Carnival	2006 -->
Picanto	2007 -->
Rio	2005 -->
Sorento	2006 -->
Sportage	2004 -->



The following Kia models are equipped with 2 X 8 ISO


Cee'd	2007 -->
Sportage	2008 -->
Soul	2008 -->

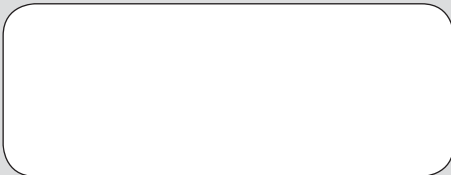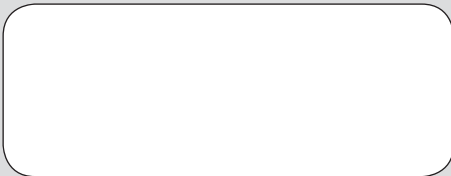

## T - Harness

## Koppeladapters

ean 8715647808361

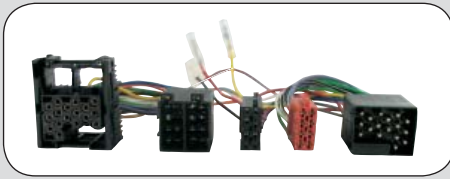


**20.1020-902**



Defender 2005 -->  
Discovery II 1999 --> 2005  
Freelander 2001 --> 2005  
Range Rover 2002 --> 2008

ean 8715647809184

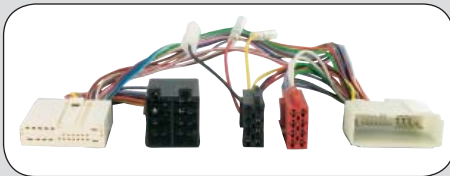


**20.1121-902**



Freelander 2005 --> 2007  
*Equipped with Sony sound system*

ean 8715647809214

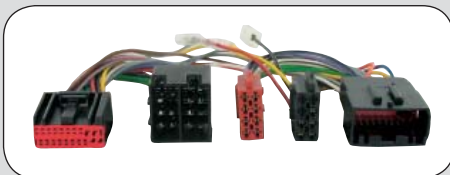


**20.1148-902**



Discovery 2005 -->  
Freelander II 2007 -->  
Range Rover Sport 2005 --> 2007

ean 8715647817097

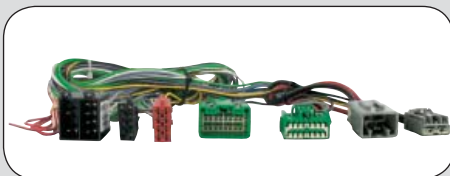


**20.1261-902**



Discovery 2005 -->  
Range Rover Sport 2005 -->  
*Equipped with Harman Kardon Premium audio system*

ean 8715647848008

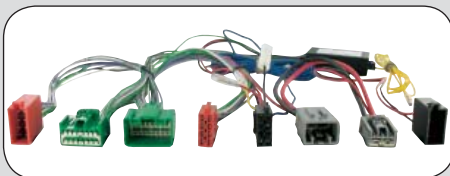

**20.1261-903**



Range Rover Sport 2007 -->  
*Equipped with Harman Kardon Logic 7 audio system*

*For correct use of the adapter use one of the extension cables on page 3*

ean 8715647849775




**20.1261-915**



Landrover 2007 -->  
Freelander II 2007 -->  
*Without navigation system. With or without amplifier. With "phone in" function. Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

ean 8715647808415

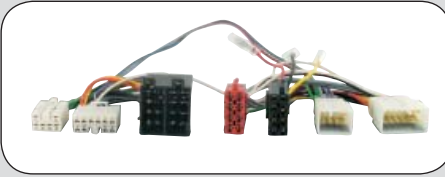

**20.1300-902**



ES 300	2002 --> 2005
GS 300	2005 -->
GS 400	1998 --> 2001
GS 430	2005 -->
IS 200/ 300	2001 --> 2005
LS 400	1995 --> 2000

LS 430	2001 --> 2005
LX 470	1999 --> 2002
RX 300	1999 --> 2005
SC 400	1992 --> 2000



ean 8715647849982



**20.1301-904**




GS 450	2006 -->
IS 220/ 250	2006 -->
IS350	2006 -->

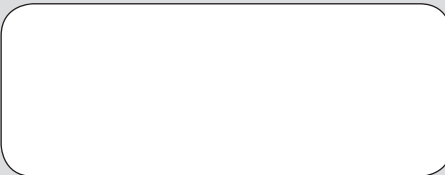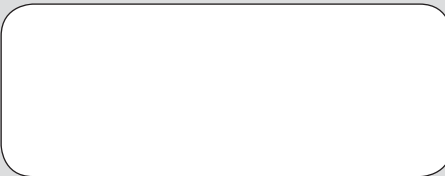

**T - Harness**

**Koppeladapters**

ean 8715647809139

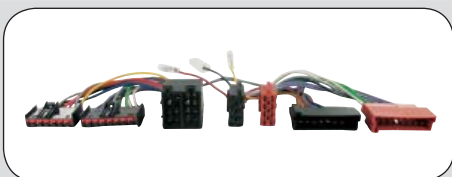


121 1996 --> 2002

**20.1114-907**  
7 ways power connector



ean 8715647809191

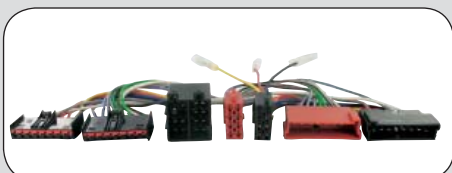


121 1996 --> 2002

**20.1114-908**  
8 ways power connector



ean 8715647809122

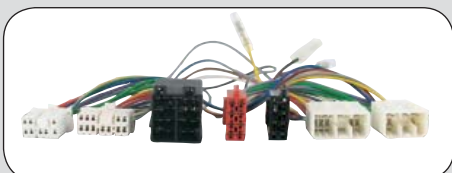


121 1989 --> 1996  
323 1994 --> 1998  
626 1992 --> 1997  
929 1988 --> 1991  
B series 1996 --> 1998  
MX3 - 5 - 7 1993 --> 1999  
Premacy 1988 --> 1991  
RX7 1993 --> 2003

**20.1170-902**



ean 8715647809146

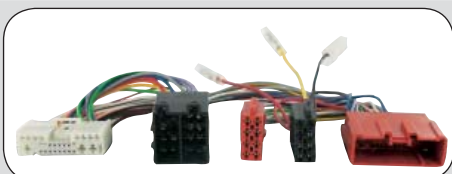


2	2003 --> 2007	M.P.V.	2000 --> 2004
3	2003 -->	MX5	1998 --> 2004
323	1998 --> 2002	Premacy	2000 --> 2004
5	2005 -->	RX8	2003 -->
6	2002 --> 2007	Tribute	2001 --> 2004
626	1998 --> 2002	Xedos	01 2001 -->
Demio	2000 --> 2002		

**20.1171-902**



ean 8715647844697

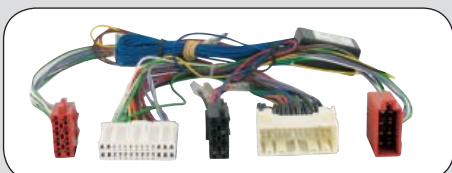

6 2007 -->  
CX7 2008 -->

*Equipped with Bose audio system*


**20.1171-903**



# Mercedes

## T - Harness

ean 8715647849340

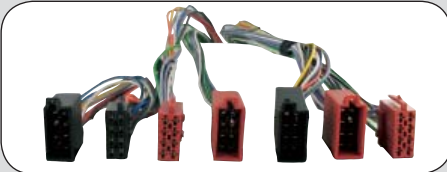


20.1000-500



E class --> 2002

Parrot adapter 500 cm. With OEM amplifier in the rear

ean 8715647811804

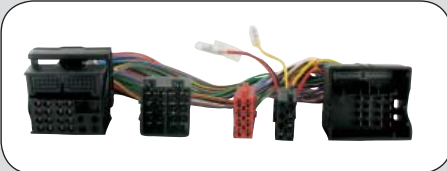

20.1194-901




CLS W219  
E class W211 2002 --> 2003  
E class W211 2003 -->  
SLK R171 2004 -->

Audio 20 system  
Audio 10/ 20 system  
Audio 20 system  
Audio 20 system

Pre wired for steering wheel control

ean 8715647829823

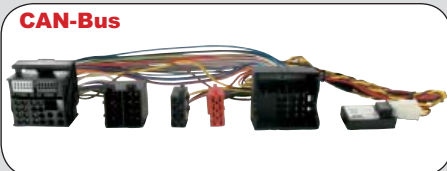

20.1194-925




**CAN-Bus**

CLS W219  
E class W211 2002 --> 2003  
E class W322 2003 -->  
SLK R171 2004 -->

Audio 20 system  
Audio 10/ 20 system  
Audio 20 system  
Audio 20 system

Pre wired for steering wheel control

ean 8715647811811

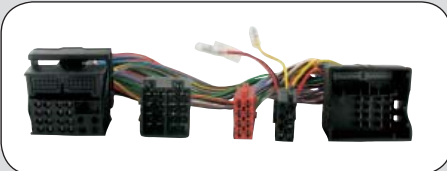

20.1194-902



A class W169 2004 --> \*  
\*Audio 20/ 50APS/ Comand JPS without Harman Kardon Sound system

B class W245 2005 --> \*  
\*Audio 20/ 50APS/ Comand JPS without Harman Kardon Sound system


C class W203 2003 --> 2008  
C class W204 2007 -->  
CLC CL-203 2008 -->  
CLK W209 2004 -->  
G class W463 2007 -->  
GL X164 2006 -->  
M class W164 2006 -->  
R class W251 2006 -->

Without Bose (fiber optic)  
Without Harman Kardon system  
Without Harman Kardon system  
Without Harman Kardon system  
Audio20/ Comand APS -  
Without Harman Kardon system  
Without Harman Kardon system  
Without Harman Kardon system  
Audio 20CD/ Audio 50 APS/  
Comand APS without Harman Kardon system  
With most adapter

Pre wired for steering wheel control

Sprinter 2006 -->

ean 8715647849999

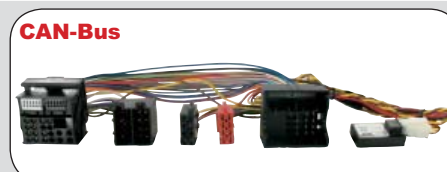

20.1194-926



**CAN-Bus**

A class W169 2004 --> \*  
\*Audio 20/ 50APS/ Comand JPS without Harman Kardon Sound system

B class W245 2005 --> \*  
\*Audio 20/ 50APS/ Comand JPS without Harman Kardon Sound system

C class W203 2003 --> 2008  
C class W204 2007 -->  
CLC CL-203 2008 -->  
CLK W209 2004 -->  
G class W463 2007 -->  
GL X164 2006 -->  
M class W164 2006 -->  
R class W251 2006 -->

Without Bose (fiber optic)  
Without Harman Kardon system  
Without Harman Kardon system  
Without Harman Kardon system  
Audio20/ Comand APS -  
Without Harman Kardon system  
Without Harman Kardon system  
Without Harman Kardon system  
Audio 20CD/ Audio 50 APS/  
Comand APS without Harman Kardon system  
With most adapter


Pre wired for steering wheel control

Sprinter 2006 -->

## Koppeladapters

## T - Harness

ean 8715647844666

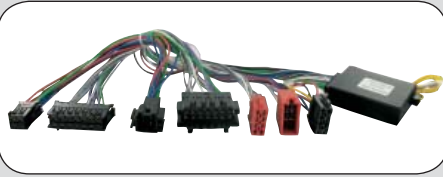

**20.1194-905**



B class W245 2005 -->  
CLS 2005 -->  
E class W211 2004 -->  
R class W251 2006 -->

S class W221 2005 -->  
SL R230 2002 -->

Equipped with Audi 50 APS/ Comand APS system  
Pre wired for steering wheel control  
For correct use of the adapter use one of the extension cables on page 3

ean 8715647833486



**20.1194-903**




A class W169 2004 -->  
B class W245 2005 -->  
C class W204 2007 -->  
CL W204 2008 -->  
CLK W209 2003 -->  
E class W211 2003 -->  
G class W463 1990 --> 2007  
GL X164 2006 -->  
M class W164 2006 -->  
R class W251 2006 -->  
S class W221 2006 -->  
SLK R171 2004 -->

Pre wired for steering wheel control

Equipped with Harman Kardon audio system

ean 8715647838573

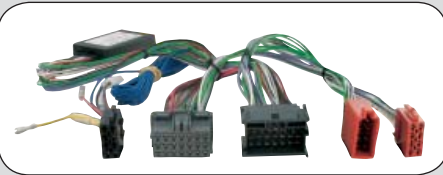

**20.1194-904**




C class W203 2003 --> 2007  
C class W204 2007 -->  
CL C215 2003 -->  
E class W211 2006 -->  
M class W163 2001 --> 2005  
S class W220 2003 --> 2005  
SL R230 2004 -->

Equipped with Bose sound system/ Pre wired for steering wheel control

The following Mercedes models can be equipped with 2 X 8 ISO (Audio 5 system)

190 W 201	1982 --> 1993	G class W460/ 461	1979 --> 2001	
A class W168	1997 --> 2003	G class W463	2001 --> 2007	(without active system/ Harman Kardon system)
A class W169	2004 -->			(without active system)
Actross	1997 -->	M class W163	1997 --> 2005	
Alego	1989-->	S class W140	1990 --> 1999	
Axor	2002 -->	S class W220	1999 --> 2003	(without Bose system)
C class W202	1993 --> 2000 (without active system)	SL R129	1988 --> 2002	(without active system)
C class W203	2000 --> 2003 (without active system)	SL R230	2002 --> 2004	(without active system)
CL C215	1999 --> 2003 (without active system)	SLK R170	1996 --> 2004	(without Bose system)
CLK W208	1997 --> 2002 (without Bose system)	Sprinter	1995 --> 2005	
CLK W209	2003 --> 2004 (without Harman Kardon)	Sprinter	2006 -->	
E class W124	1985 --> 1995	V class W683/2	1996 --> 2008	
E class W210	1996 --> 2002 (without active system)			

ean 8715647808361

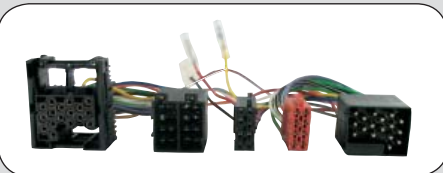

**20.1020-902**



F 1996 --> 2001  
TF 2002 --> 2005  
ZR 2001 --> 2005  
ZS 2001 --> 2003  
ZT 2001 --> 2005

## Koppeladapters




# Mitsubishi

## T - Harness

## Koppeladapters

ean 8715647827294

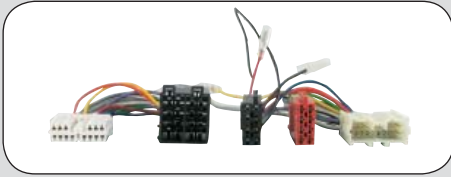


20.1201-902



3000 GT	1999 --> 2000	Lancer	1993 --> 2005
Carisma	1999 --> 2005	L200	1997 --> 2005
Colt	1992 --> 1995	Montero	2001 --> 2005
Colt	2007 -->	Pajero	1999 --> 2005
Eclipse	2001 --> 2005	Showgun Pinin	1999 --> 2005
Galant	1985 --> 1998	Space Star	1992 --> 2005
Galopper	1996 -->	Space Runner	1992 --> 1998
Grandis	2004 -->	Space Wagon	1999 --> 2005

ean 8715647827294

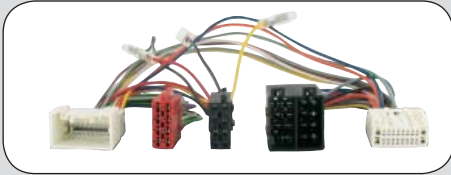


20.1202-902



Lancer	2008 -->
Montero	2007 -->
Pajero	2007 -->
Outlander	2007 -->
Shogun	2007 -->

*Without navigation system and without amplifier*

ean 8715647826211

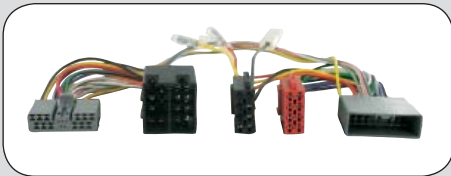


20.1132-902



Lancer	2007 -->
Montero	2007 -->
Pajero	2007 -->
Outlander	2007 -->
Shogun	2007 -->

*With navigation system without amplifier*

ean 8715647833844

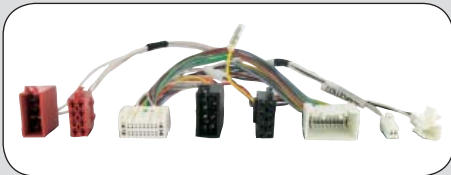

20.1202-903



Lancer	2008 -->
Montero	2007 -->
Pajero	2007 -->
Outlander	2007 -->
Shogun	2007 -->

*Without navigation system with amplifier*

ean 8715647849920




20.1202-904



Lancer	2008 -->
Montero	2007 -->
Pajero	2007 -->
Outlander	2007 -->
Shogun	2007 -->

*With navigation system and with amplifier*

ean 8715647849937

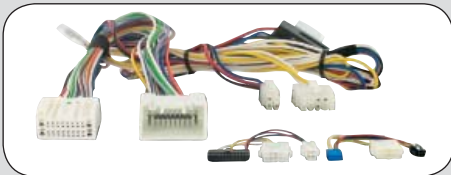

20.1202-915



Lancer	2008 -->
Montero	2007 -->
Pajero	2007 -->
Outlander	2007 -->
Shogun	2007 -->


*Without navigation system. With or without amplifier. With "phone in" function. Control the volume of your phone call, directly from the radio.*


*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

**T - Harness**

**Koppeladapters**

ean 8715647809115

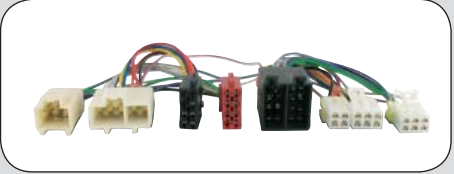

**20.1210-902**  +15

All models	--> 2000
Pathfinder	2001 --> 2004

ean 8715647817516



**20.1215-902**  +15

Almera	2003 --> 2006
Almera Tino	2001 --> 2005
Maxima	2004 --> 2006

ean 8715647809092



**20.1213-902**  +15

350Z	2003 -->	Patrol	1998 --> 2005
Almera	2000 --> 2002	Primera	1999 --> 2001
Almera Tino	2001 --> 2005	Primastar	2002 --> 2005
Interstar	2004 -->	Terrano II	2000 --> 2004
Kubistar	2004 -->	X-Trail	2002 --> 2007
Micra	2003 --> 2004		
Navara	--> 2004		

ean 8715647817448



**20.1214-902**  +15


350Z	2004 -->	Patrol	2004 -->
Micra	2004 -->	Patrol Pick-Up	2006 -->
Murano	2004 -->	Terrano	2000 -->
Navara	2004 --> 2006	X-Trail (navigation)	2002 -->
Pathfinder	--> 2007		

ean 8715647827287




**20.1216-902**  +15

Almera	2007 -->	Sentra	2007 -->
Altima	2007 -->	Tiida	2007 -->
Maxima	2007 -->	Titan	2004 -->
Navara	2006 -->	Versa	2007 -->
Pathfinder	2007 -->	X-Trail	2008-->
Primastar	2006 -->		
Qashqai	2007 -->		



ean 8715647808408

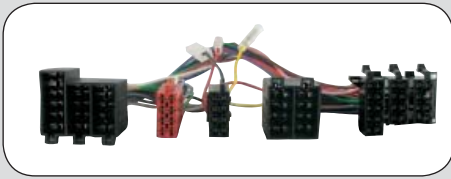


**20.1230-902**



Astra	1992 --> 2004
Calibra	1991 -->
Combo	1993 --> 2000
Omega	1994 --> 1999
Tigra	--> 2003
Vectra	1995 --> 2002
Zafira	1999 --> 2004

2X8 + 1X10 pins total 26 pins

ean 8715647809078

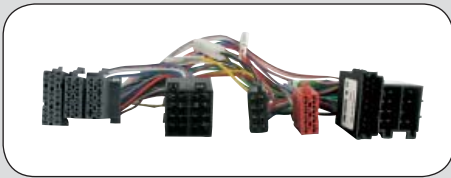

**20.1231-902**




Astra	2002 --> 2004
Corsa	2000 --> 2004
Movano	2004 --> 2006
Meriva	2003 --> 2004
Tigra	2003 --> 2005

Vivaro	2001 --> 2006
Vectra	2002 --> 2004
Zafira	2004 --> 2005

2X8 ISO + 1X20 pins mini ISO total 36 pins

ean 8715647809153

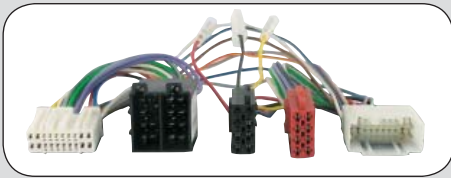


**20.1131-902**



Agila 2008 -->

ean 8715647811828

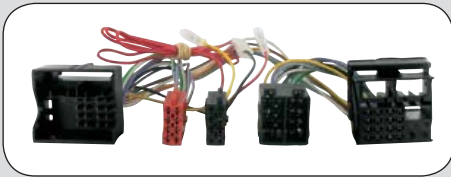


**20.1232-902**



Agila	2000 --> 2008
Astra	2004 -->
Corsa	2004 -->
Combo	2002 -->
Omega	2001 --> 2005
Meriva	2005 -->

Movano	2006 -->
Vectra	2005 -->
Vivaro	2006 -->
Zafira	2005 -->

ean 8715647850025

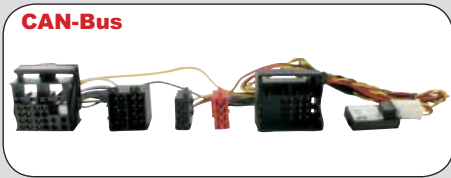

**20.1232-925**



**CAN-Bus**


Agila	2000 --> 2008
Astra	2004 -->
Corsa	2004 -->
Combo	2002 -->
Omega	2001 --> 2005
Meriva	2005 -->

Movano	2006 -->
Vectra	2005 -->
Vivaro	2006 -->
Zafira	2005 -->



**T - Harness**

ean 8715647828468

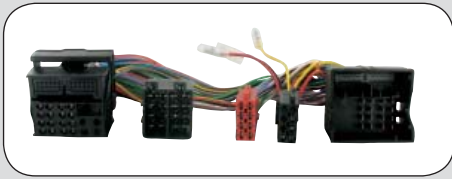

**20.1232-910**




Agila 2000 --> 2008  
 Astra 2004 -->  
 Corsa 2004 -->  
 Combo 2002 -->  
 Omega 2001 --> 2005  
 Meriva 2005 -->

Movano 2006 -->  
 Vectra 2005 -->  
 Vivaro 2006 -->  
 Zafira 2005 -->

*Equipped with Audio CD30/ 40 / 70/ 90 Pre wired for steering wheel control*

ean 8715647850032

**CAN-Bus**

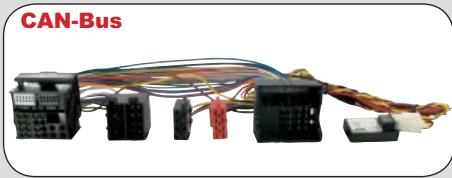

**20.1232-926**




Agila 2000 --> 2008  
 Astra 2004 -->  
 Corsa 2004 -->  
 Combo 2002 -->  
 Omega 2001 --> 2005  
 Meriva 2005 -->

Movano 2006 -->  
 Vectra 2005 -->  
 Vivaro 2006 -->  
 Zafira 2005 -->

*Equipped with Audio CD30/ 40 / 70/ 90 Pre wired for steering wheel control*

ean 8715647850079

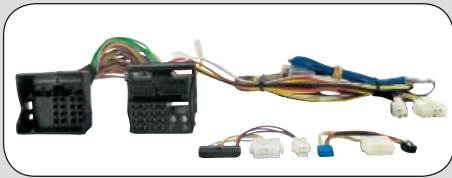

**20.1232-915**





All models with 40 ways Most adapter and "phone in" function.

*Without navigation system. With or without amplifier.*

*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
 Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

**Koppeladapters**

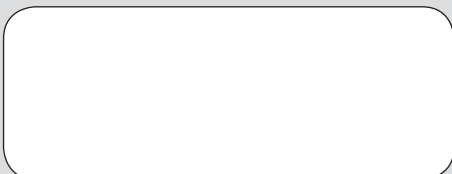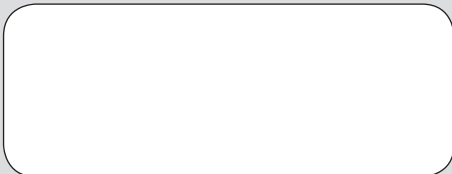


# Peugeot

## T - Harness

## Koppeladapters

ean 8715647814300

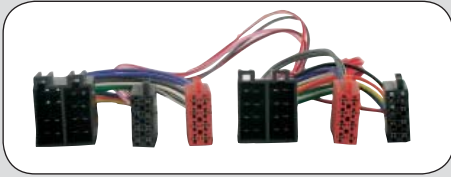


20.1040-902



106	--> 2000
205	1983 --> 1996
206	1998 --> 2005
309	--> 2000
405	1987 --> 06 - 1992
605	1990 --> 1999

ean 8715647811781

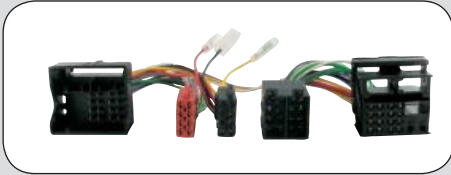


20.1041-901



207	2006 -->
307	2006 --> 2008
308	2008 -->
407	2004 -->
607	2006-->

ean 8715647817578

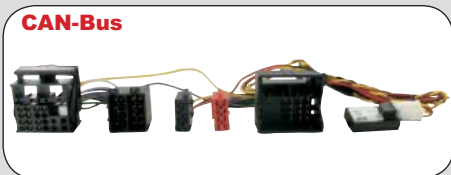


20.1041-902



207	2006 -->
308	2008 -->
407	2004 -->
607	2006 -->

ean 8715647849913

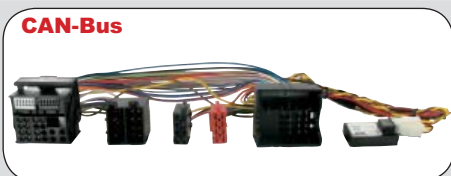


20.1041-926



207	2006 -->
308	2008 -->
407	2004 -->
607	2006 -->

*Pre wired for steering wheel control*

ean 8715647827294

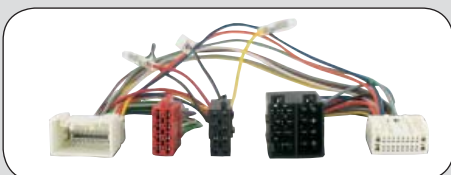


20.1202-902



407	2007 -->
-----	----------

*Without navigation system and without amplifier*

ean 8715647826211

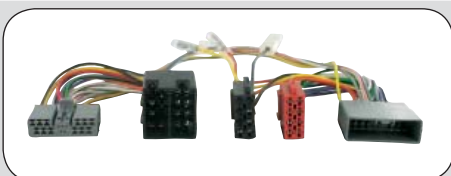

20.1132-902




407	2007 -->
-----	----------

*With navigation system without amplifier*

**T - Harness**

ean 8715647833844

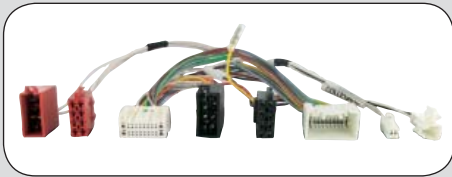

**20.1202-903**



4007

2007 -->

*Without navigation system with amplifier*

ean 8715647849920



**20.1202-904**




4007

2007 -->

*With navigation system and with amplifier*

ean 8715647849937

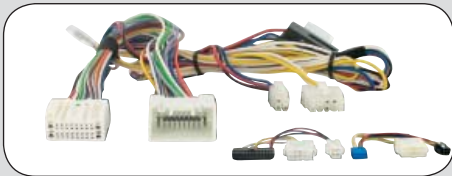

**20.1202-915**



4007

2007 -->

*Without navigation system. With or without amplifier. With "phone in" function. Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

ean 8715647849890



**20.1041-915**





*All models 2005 --> with 40 ways Most adapter and "phone in" function.*

*Without navigation system. With or without amplifier.*

*Control the volume of your phone call, directly from the radio.*


*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

**Koppeladapters**

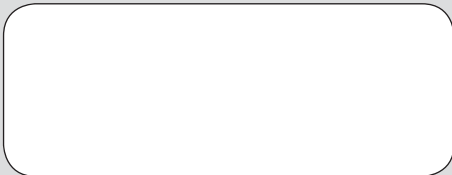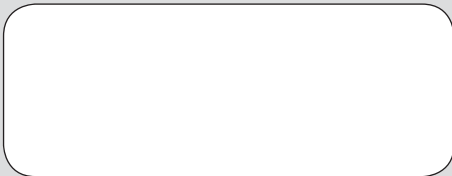



ean 8715647847971

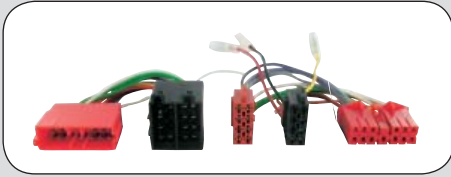

**20.1250-901**



Espace --> 2004  
R5  
R19  
R21 07 - 1992 -->  
Twingo 1993 -->

ean 8715647819183




**20.1250-902**





Espace 2004 -->  
*Adapter in center tunnel console*

ean 8715647850957

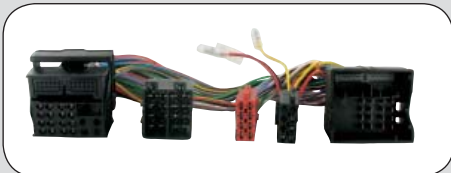


**20.1250-903**

Koleos 09 - 2009 -->  
Megane III 11 - 2008 -->  
Twingo II 02 - 2009 -->  
Scenic II + III 03 - 2009 -->

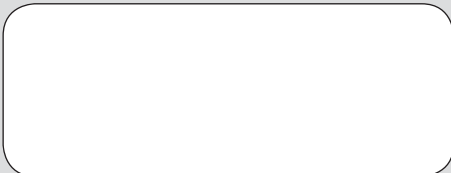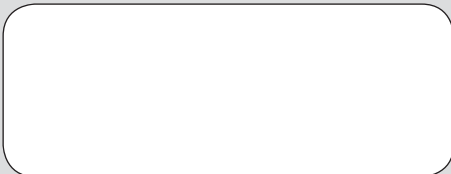

T - Harness

ean 8715647808361

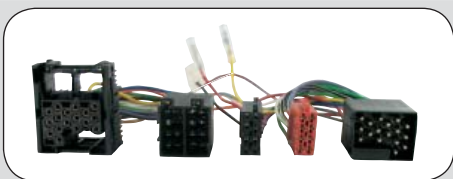


75

20.1020-902






ean 8715647808378

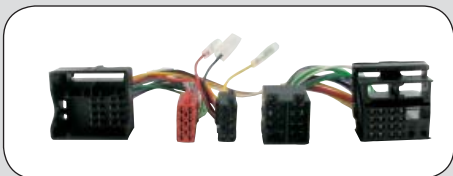


All models 2001 -->

20.1024-902

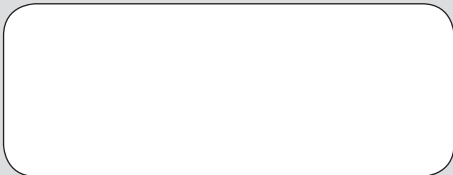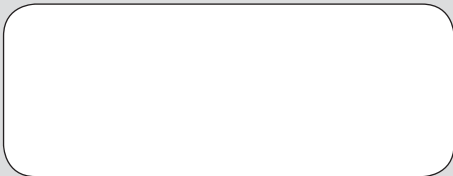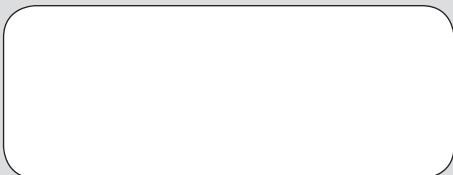

Koppeladapters

ean 8715647850056

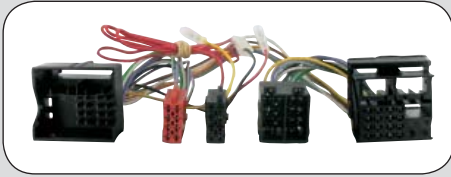


20.1271-902



9.3  
9.5

2004 --> 2006  
2004 --> 2007

ean 8715647827348

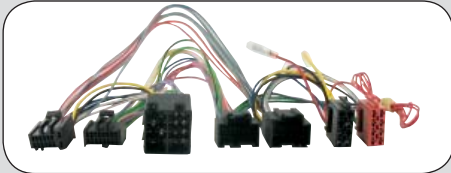


20.1271-903



9.3  
9.5

2006 -->  
2007 -->

ean 8715647833303

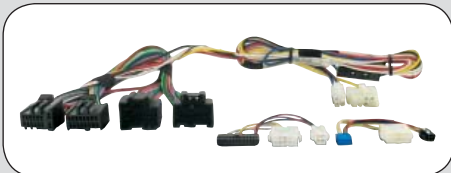

20.1271-904




9.3  
9.5

2007 -->  
2007 -->

*Without navigation system. With or without amplifier. With "phone in" function. Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

ean 8715647838610

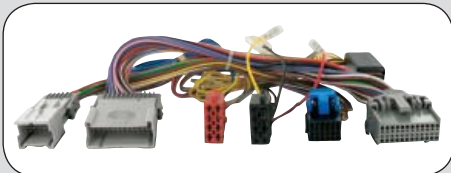



20.1038-902



9.7X

2005 -->


*Equipped with seperate amplifier*

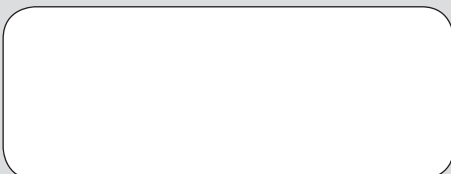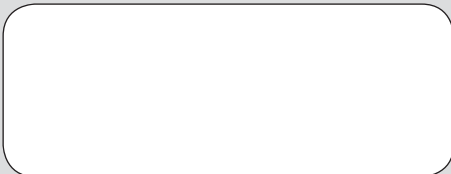

T - Harness

Koppeladapters

ean 8715647811859

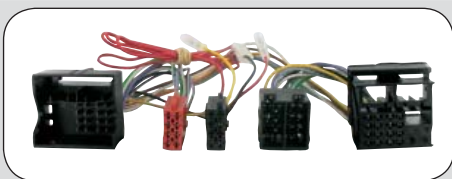


20.1320-902



Altea 2005 -->  
Cordoba 2003 --> 2005  
Leon 2005 -->  
Toledo 2005 -->

ean 8715647849807

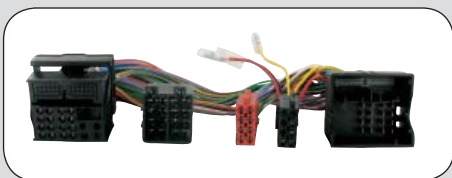

20.1320-910




Altea 2005 -->  
Cordoba 2003 --> 2005  
Leon 2005 -->  
Toledo 2005 -->

*Pre wired for steering wheel control*

ean 8715647828482

**CAN-Bus**

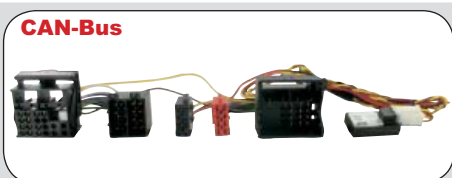


20.1320-925



Altea 2005 -->  
Cordoba 2003 --> 2005  
Leon 2005 -->  
Toledo 2005 -->

ean 8715647849814

**CAN-Bus**

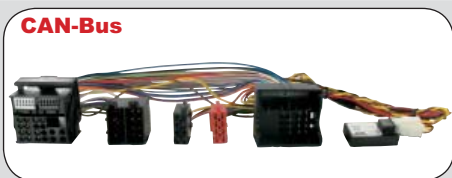

20.1320-926



Altea 2005 -->  
Cordoba 2003 --> 2005  
Leon 2005 -->  
Toledo 2005 -->

*Pre wired for steering wheel control*

ean 8715647849821




20.1320-915



All models 2005 --> with 40 ways Most adapter and "phone in" function.  
*Without navigation system. With or without amplifier.*  
*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

ean 8715647809191 (908)  
ean 8715647809139 (907)

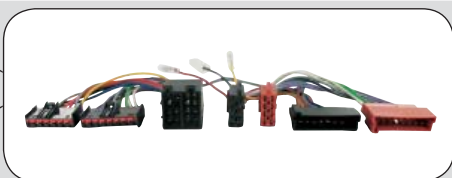


20.1114-907 7 ways power connector

20.1114-908 8 ways power connector



Alhambra 1997 --> 2000

ean 8715647811859

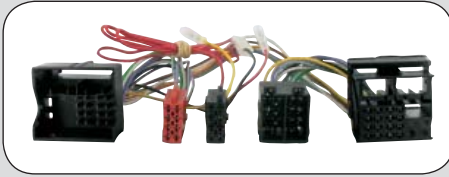


20.1320-902



Fabia	2007 -->
Octavia	2004 -->
SuperB	2008 -->
Roomster	2007 -->

ean 8715647849807

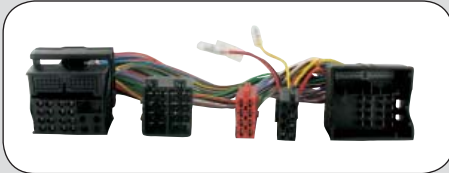


20.1320-910



Fabia	2007 -->
Octavia	2004 -->
SuperB	2008 -->
Roomster	2007 -->

*Pre wired for steering wheel control*

ean 8715647828482

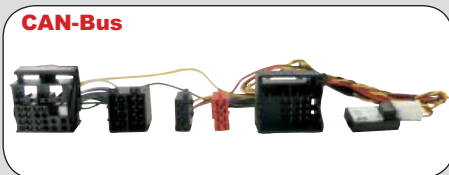


20.1320-925



Fabia	2007 -->
Octavia	2004 -->
SuperB	2008 -->
Roomster	2007 -->

ean 8715647849814

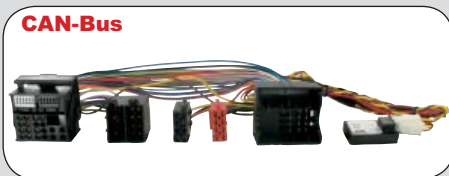

20.1320-926



Fabia	2007 -->
Octavia	2004 -->
SuperB	2008 -->
Roomster	2007 -->

*Pre wired for steering wheel control*

ean 8715647849821



20.1320-915




All models 2005 --> with 40 ways Most adapter and "phone in" function.

*Without navigation system. With or without amplifier.*


*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:  
Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

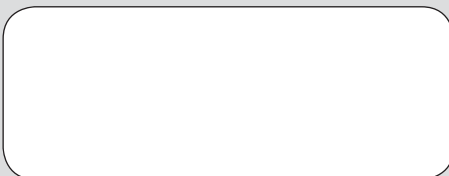

**T - Harness**

ean 8715647811811



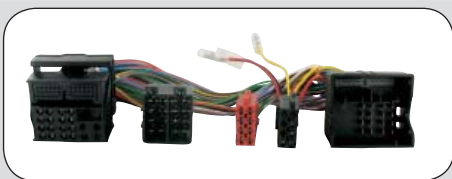


For Four

20.1194-902




**Koppeladapters**

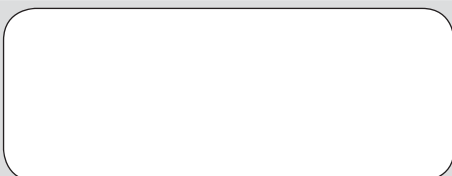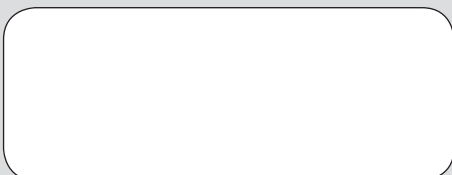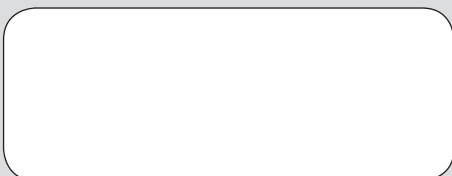







ean 8715647809054

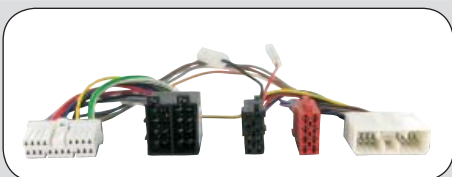

20.1086-902




Actyon	2006 -->
Kyron	2005 -->
Korando	2002 -->
Musso	2005 -->
Rexton	2003 -->
Rodius	2005 -->

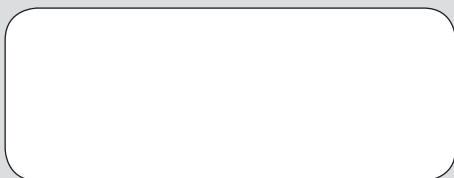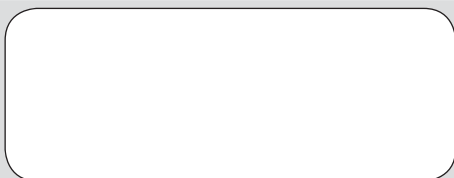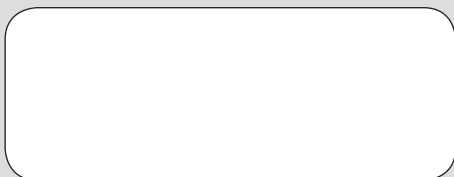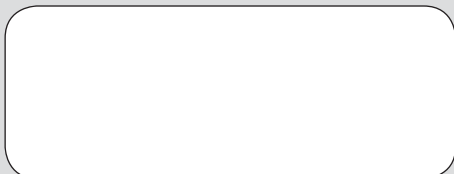

**T - Harness**

**Koppeladapters**

ean 8715647817509

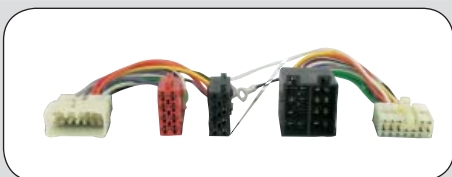


Justy

1996 --> 2004

**20.1294-902**



ean 8715647809085

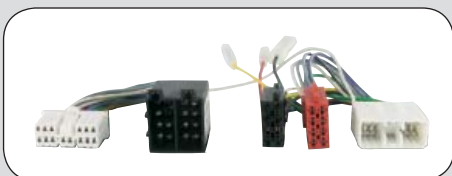


Baja  
Forester  
Impreza  
Justy  
Legacy  
Outback  
Vivio

2003 --> 2005  
1997 --> 2007  
1995 --> 2005  
2004 -->  
1995 --> 2005  
2000 -->  
1993 -->

**20.1286-902**



ean 8715647839266

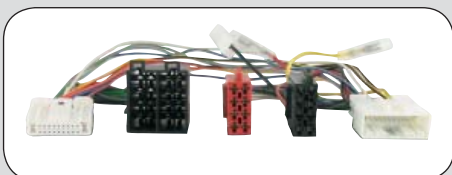


Impreza

2007 -->

**20.1287-902**





ean 8715647827287

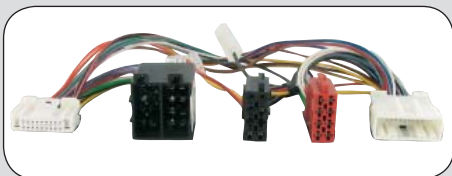


Forester

2008 -->

**20.1216-902**

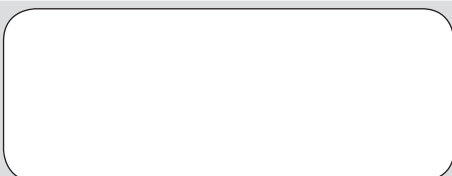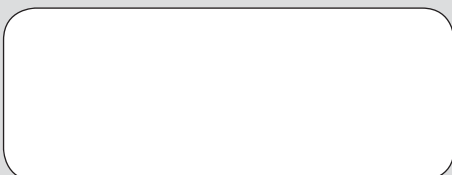

ean 8715647817509

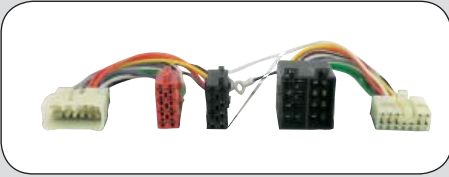


20.1294-902



Alto	1997 --> 2002
Baleno	1996 --> 2004
Escudo	1996 -->
Jimny	1999 --> 2005
Justy	1996 --> 2005
Grand Vitara	--> 2002

Sidekick	1996 -->
Swift	1992 --> 2004
Vitara	1998 --> 2004
Wagon R	1998 -->2000

ean 8715647809153

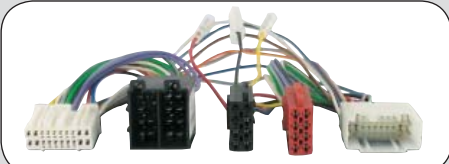


20.1131-902



Aerio	2001 -->
Grand Vitara	2003 -->
Ignis	2001 --> 2005
Jimny	2005 -->
Liana	2001 --> 2005
Splash	2007 -->

Swift	2005 -->
SX4	2006 -->
Wagon R	2002 -->
XL-7	2002 -->



ean 8715647811828

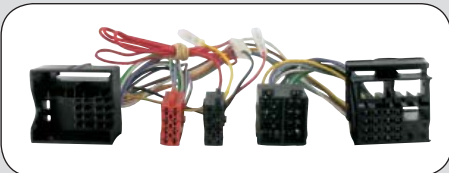

20.1232-902




Wagon R	2005 -->
---------	----------

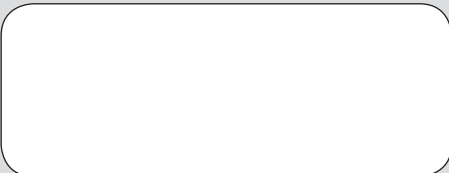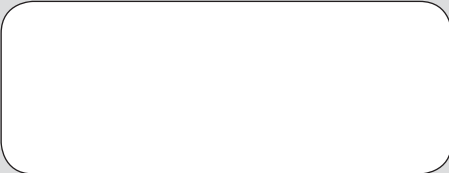

T - Harness

ean 8715647808415

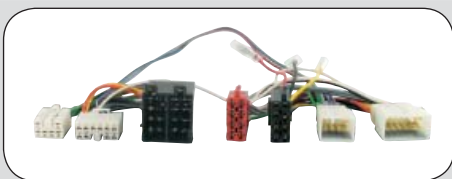


All models

20.1300-902



ean 8715647817493

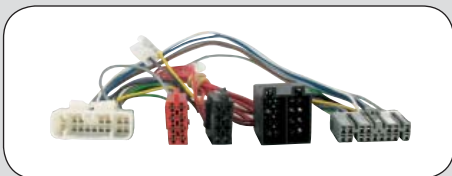

Landcruiser J120


2003 --> 2006

Connect under left seat

20.1301-902



ean 8715647846882

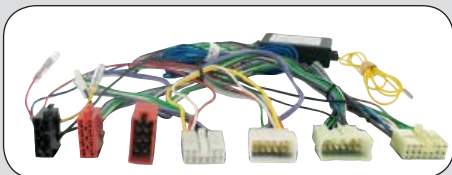

Prius



2006 -->

Equipped with JBL amplifier

20.1301-903



Koppeladapters

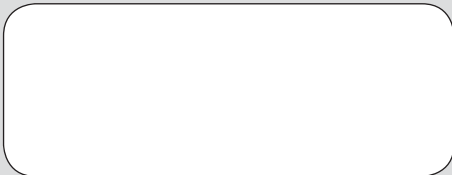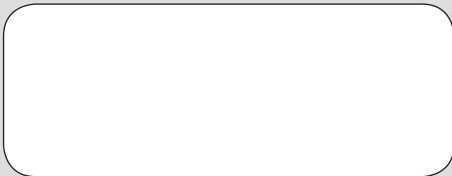


# Volkswagen

## T - Harness

## Koppeladapters

ean 8715647808415

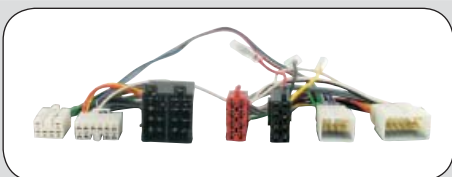


20.1300-902



Taro

1989 --> 1997

ean 8715647809139

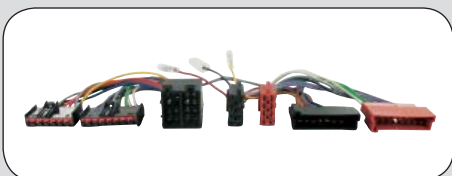

20.1114-907


7 ways power connector



Sharan

1995 --> 2005

ean 8715647809191

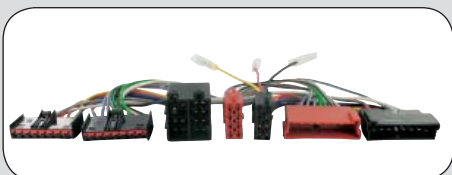

20.1114-908


8 ways power connector



Sharan

1995 --> 2005

ean 8715647811859

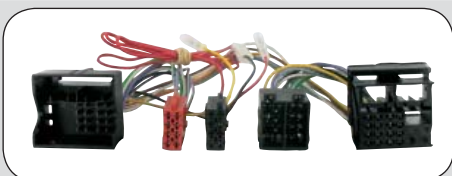

20.1320-902



Caddy

2004 -->

Passat

2001 -->

EOS

2004 -->

Phaeton

2003 -->

Fox

2005 -->

Polo

2002 -->

Golf V

2003 --> 2008

Touareg

2003 -->

Golf V Plus

2003 --> 2008

Touran

2003 -->


Golf VI

2008 -->

Multivan

2003 --> 2005

ean 8715647849807

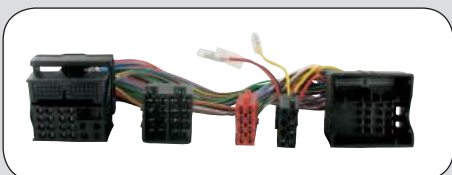

20.1320-910



Caddy

2004 -->

Passat

2001 -->

EOS

2004 -->

Phaeton

2003 -->

Fox

2005 -->

Polo

2002 -->

Golf V

2003 --> 2008

Touareg

2003 -->

Golf V Plus

2003 --> 2008

Touran

2003 -->

Golf VI


2008 -->

Multivan

2003 --> 2005

*Pre wired for steering wheel control*

ean 8715647828482

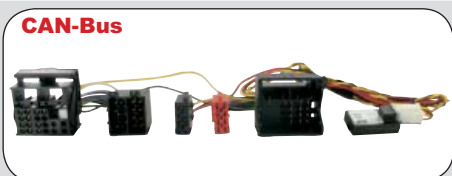

20.1320-925



Caddy

2004 -->

Passat

2001 -->

EOS

2004 -->

Phaeton

2003 -->

Fox

2005 -->

Polo

2002 -->

Golf V

2003 --> 2008

Touareg

2003 -->

Golf V Plus

2003 --> 2008

Touran

2003 -->

Golf VI


2008 -->

Multivan

2003 --> 2005

### CAN-Bus

ean 8715647849814

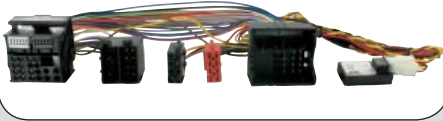

20.1320-926



Caddy	2004 -->	Passat	2001 -->
EOS	2004 -->	Phaeton	2003 -->
Fox	2005 -->	Polo	2002 -->
Golf V	2003 --> 2008	Touareg	2003 -->
Golf V Plus	2003 --> 2008	Touran	2003 -->
Golf VI	2008 -->		
Multivan	2003 --> 2005		

*Pre wired for steering wheel control*



ean 8715647849821

20.1320-915




All models 2005 --> with 40 ways Most adapter and "phone in" function.

*Without navigation system. With or without amplifier.*

*Control the volume of your phone call, directly from the radio.*

*Adapter is suitable to connect directly to:*

*Parrot CK3000/ CK3100/ CK3200/ CK3300/ 3400GPS/ MK6000*

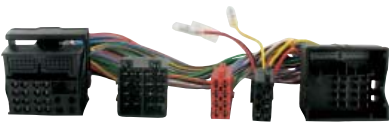

ean 8715647811811

20.1194-902



Crafter 2007 -->

*Pre wired for steering wheel control*

### CAN-Bus

ean 8715647849999





20.1194-926




Crafter 2007 -->

*Pre wired for steering wheel control*

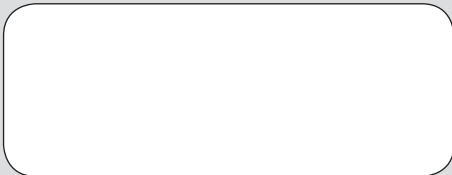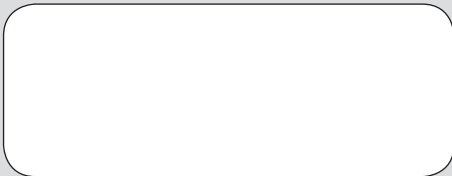



ean 8715647809061

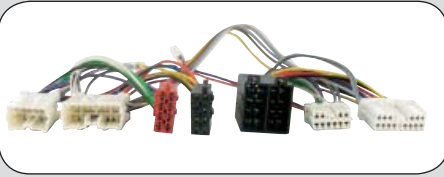


**20.1352-902**



760	1993 --> 1996
850	1992 --> 1997
940	1991 --> 1998
960	1993 --> 2000
C70/ S70/ V70	1997 --> 2000
S40/ V40	1996 --> 2000
FH/ FN/ NH	1994 --> 2005
FL6/ FS7	1986 --> 1999

ean 8715647808422

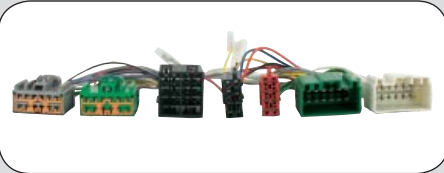


**20.1354-902**



C70	2000 --> 2005
S40	2001 --> 2007
S60	
S70	2001--> 2007
S80	1999 --> 2006
V40	2000 --> 2003
V70	2000 --> 2007
XC 70	2000 --> 2007

Audio system without centre speaker

ean 8715647811842

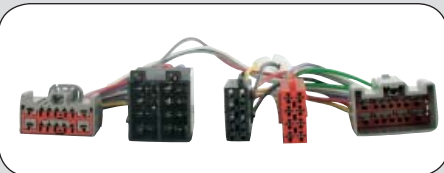


**20.1356-902**



C30	2006 -->	(install at the back of the CD player)
C70	2006 -->	(install at the back of the CD player)
S40	2004 --> 2007	(install under passenger seat)
V50	2004 -->	(install at the back of the CD player)
XC90	2002 -->	(install at the back of the radio)

Equipped with Base Performance Sound system

ean 8715647827256

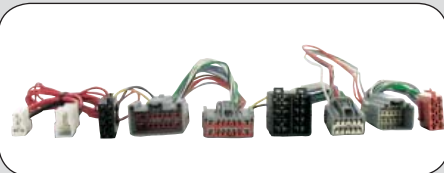

**20.1357-903**



V70 (135)	2007 -->	(install at the back of the CD player)
S80	2006 -->	(install at the back of the CD player)
XC70	2007 -->	(install at the back of the CD player)

Equipped with Base Performance Sound system  
Cable includes derivation ignition +15 wire

ean 8715647818728




**20.1357-902**



C30	2006 -->	(install in the rear of the amplifier)
C70	2006 -->	(install in the left rear side)
S40	2004 -->	(install in the left rear side)
S80	2006 -->	(install under passenger seat)
V50	2004 -->	(install in the left rear side)
V70 (135)	2007 -->	(install under passenger seat)
XC70	2007 -->	(install under passenger seat)
XC90	2002 -->	(install under passenger seat)

Equipped with High Performance Sound system.  
For correct use of the adapter use one of the extension cables on page 3

ean 8715647827263

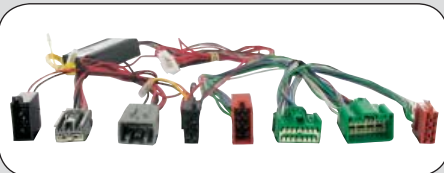

**20.1358-902**



C30	2006 -->	(install amplifier right rear speaker)
C70	2006 -->	(install in the left rear side)
V50	2004 -->	(install in the left rear side)
V70 (135)	2007 -->	(install under passenger seat)
XC70	2007 -->	(install under passenger seat)
XC90	2002 -->	(install under passenger seat)

Equipped with Premium Sound system/ Dolby Prologic and centre speaker  
For correct use of the adapter use one of the extension cables on page 3

# Notes







***Uw Partner in Connectie!***

***[www.tomacarparts.nl](http://www.tomacarparts.nl)***